





INSTALLATION INSTRUCTIONS BK AND BKT BLOWER ACCESSORY KIT

127162-01 Rev. D 04/2024

For more information, visit IHP.us.com

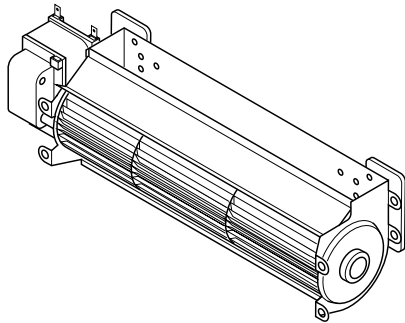

MODEL BK
MANUALLY CONTROLLED BLOWER

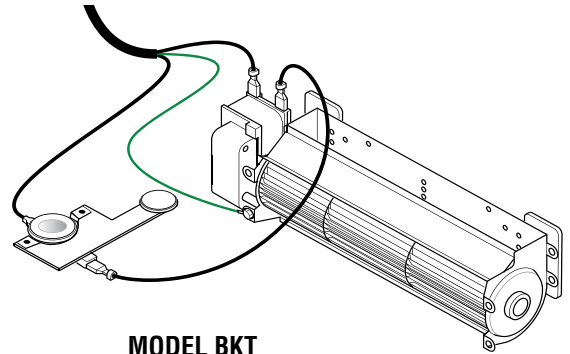

MODEL BKT
THERMOSTATICALLY CONTROLLED BLOWER

WARNING

ELECTRICAL GROUNDING INSTRUCTIONS This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle.

(Check your appliance owner's manual for specific applications and additional instructions.)

Parts included with this kit.

PART NO.	DESCRIPTION	Cat. No.		QTY
		F1081 BK	F1082 BKT	
126114-01	Blower assembly with speed control and 6 foot cord	•	•	1
104903-01	Wiring Diagram	•	•	1
103650-01	Control Knob	•	•	1
103651-01	Lock Nut	•	•	1
11164	#8- 1/2" Phillips Head Screw	•	•	2
126085-01	Thermodisc Magnetic Bracket Assembly		•	1
109892-01	Speed Control Bracket (Stamped Face Models)	•	•	1
109892-02	Speed Control Bracket (Panel Louver Models)	•	•	1
127162-01	Installation Instructions	•	•	1

Tools required

- Pliers
- Phillips Screwdriver
- Flat Blade Screwdriver

READ ALL THE STEPS BEFORE STARTING THE INSTALLATION. THE FIREPLACE MUST BE OFF AND COLD BEFORE BEGINNING. ALL WARNINGS, PRECAUTIONS AND INSTRUCTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

If any of these parts are missing or damaged, contact your dealer or IHP.us.com for referral information.

ACCESSING BLOWER COMPARTMENT/INSTALLATION

! CAUTION

Use gloves as sheet metal parts may be sharp.

! WARNING

If there is a duplex electrical outlet installed in the right side of the bottom of the fireplace base area (see Figure 4, page 3), be sure that the electrical power to the outlet is turned off before proceeding with blower installation. Failure to do this may result in serious injury.



The BK and BKT blowers utilize the same rotary squirrel cage type blower with magnetic attachment and variable speed control. The BKT also includes an additional thermostatically controlled feature for use on some direct-vent models only.

The BK blower can be installed in wood burning and B-vent model fireplaces. Both the BK and BKT blowers can be installed in some direct-vent model fireplaces if listed as an accessory in the owners manual. Blowers are installed by accessing the blower compartment through the lower louver panel or, on some models, through the control access cover under the hearth refractory panel.

YOUR UNIT COULD HAVE EITHER A 1 PIECE OR A 2 PIECE HEARTH BOTTOM REFRACTORY PANEL(S). INSTRUCTIONS FOR REMOVAL ARE:

REMOVAL OF 2 PIECE HEARTH BOTTOM REFRACTORY PANELS:

1. Remove hearth bottom refractory access panel by lifting up and angling out through fireplace opening. See *Figures 1 and 2*.
2. Remove control access cover panel.
3. Remove lower louver panel (if installed, in face) by gently pushing out panel from inside mounting frame. If not installed, place blower into position through control access hole.
4. Remove knockout plug from lower louver panel. See *Figures 1 and 2*.

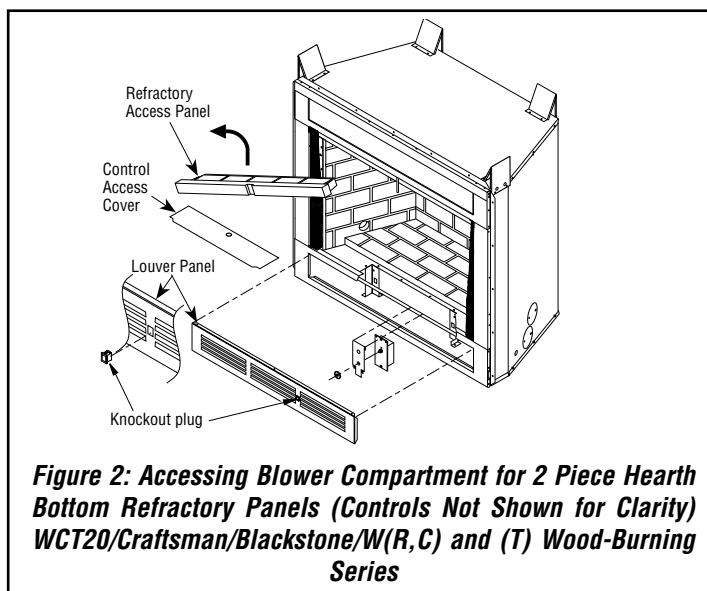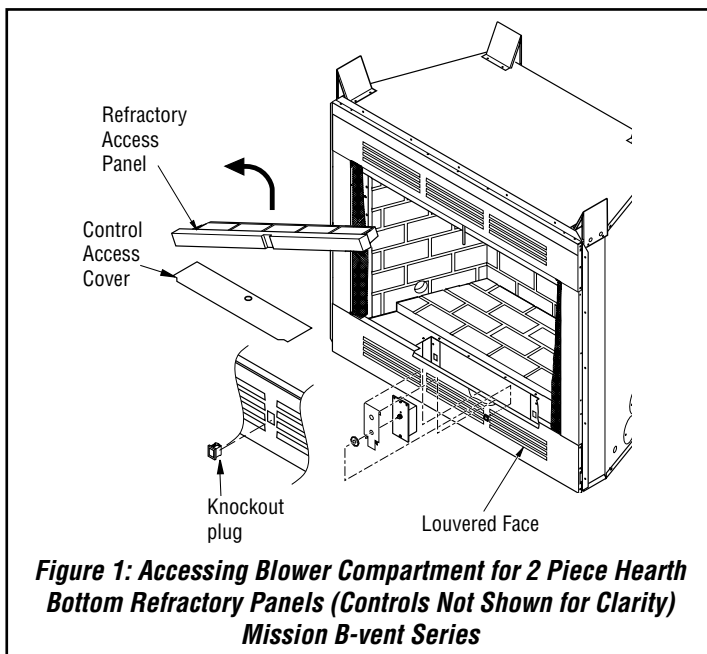

REMOVAL OF 1 PIECE HEARTH BOTTOM REFRACTORY PANEL:


LOCATING ACCESS PANEL

Should access to the lower compartment in the bottom of the fireplace be needed, an access panel is provided. See *Figure 3*.


To locate the Access Panel: Removal of both the right and left side refractories and rear refractory are required before removal of the hearth (bottom) refractory. See *Figure 3*.

For identification of refractory components. **See Figure 4 on Page 3.** Steps to remove right and left side refractories, rear refractory and hearth (bottom) refractory.

1. Remove two (2) refractory retainers.
2. Remove right and left side refractory panels. Be sure to brace rear refractory when removing whichever side, right or left, that is removed last in order to ensure that rear refractory is stable.
3. Remove the rear refractory panel.
4. Remove the hearth bottom refractory panel.

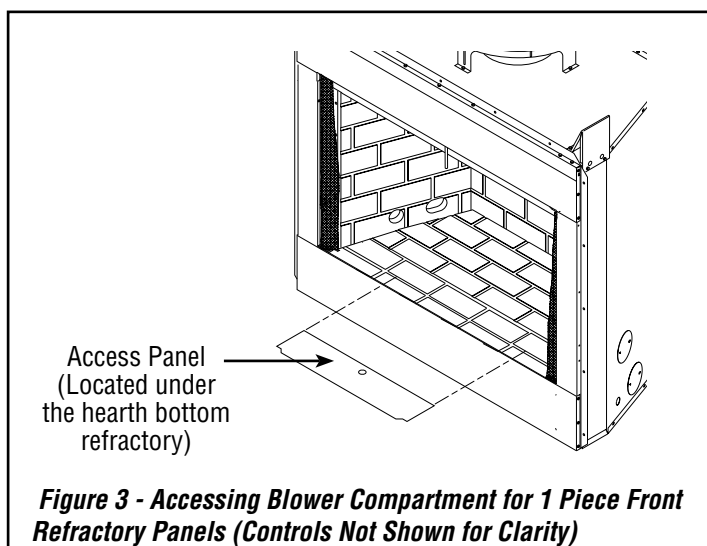

ACCESSING BLOWER COMPARTMENT/INSTALLATION *Continued*

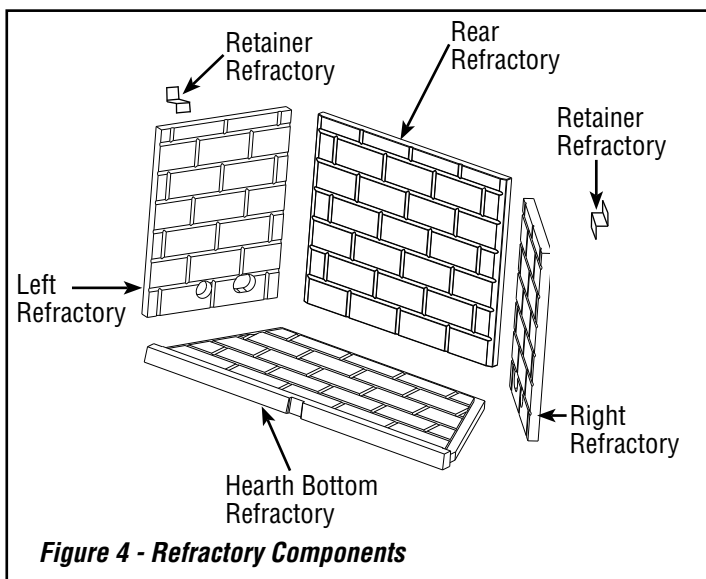

AFTER REMOVAL OF 1 PIECE OR 2 PIECE HEARTH BOTTOM REFRACTORY PANEL(S) CONTINUE INSTALLATION USING THE FOLLOWING STEPS:

1. The lower front louver panel can be removed easily, see removing louver panel. See **Figures 5 and 6**.
2. Remove metal lock nut from plastic control shaft by turning lock nut with pliers counter clockwise. Mount speed control box by placing plastic control shaft through hole on lower portion of the left right side of secondary face by sliding control box down through large hole in firebox bottom and up behind firebox side (**see Figure 7, page 4**). Secure speed control to side face with previously removed lock nut by pushing and turning lock nut clockwise with pliers until it is tight against side face of fireplace (**see Figure 7, page 4**).
3. Place control knob, provided, onto control shaft (**see Figure 7, page 4**).
4. Check to make sure power cord is completely clear of blower wheel and there are no foreign objects in blower wheel. Also, double check all wire leads and make sure wire routing is not pinched or in a precarious position. Correct accordingly.
5. Using pliers, remove lock nut from speed control by turning counter clockwise. Mount speed control box by placing plastic control shaft through hole on left or right side of the firebox hearth by sliding control box down through large hole in firebox bottom and up through hole (**see Figure 7, page 4**). Secure speed control to firebox hearth with previously removed lock nut with pliers by pushing and turning lock nut until it is tight against firebox hearth of fireplace (**see Figure 7, page 4**). Check to make sure power cord is completely clear of blower wheel and there are no foreign objects in blower wheel. Also, double check all wire leads and make sure wire routing is not pinched or in a precarious position. Correct accordingly.



REMOVING LOUVER PANEL

DIRECT-VENT MODELS



There are two different types of direct vent louvers: spring latch and bullet-style clip.

Spring Latch: Remove louver with spring latches by simultaneously pulling both top spring latches toward the center of the appliance until they are disengaged from the latching holes. Repeat for bottom spring latches and pull louver outward (**see Figure 5**). To reinstall, simple reverse procedure.

Bullet-Style Clip: Remove louver with bullet-style clips by using a flat blade screwdriver and snapping louver forward. Use caution not to scratch any surfaces. These panels can also be removed by inserting fingers between slots on louver and gently pulling out. **DO NOT FORCE** (**see Figure 6**). To reinstall, align bullet-style clips with locating holes on inside of firebox and push gently.

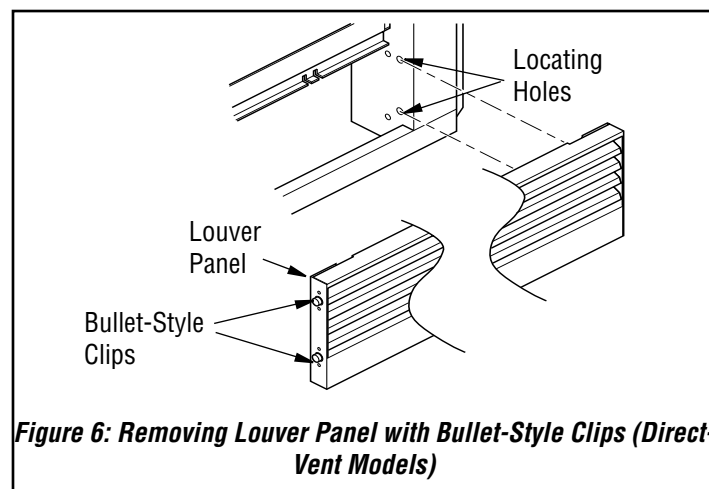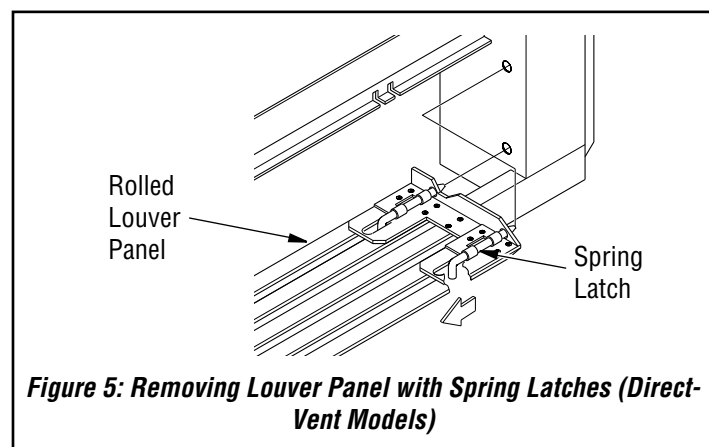


ACCESSING BLOWER COMPARTMENT/INSTALLATION Continued

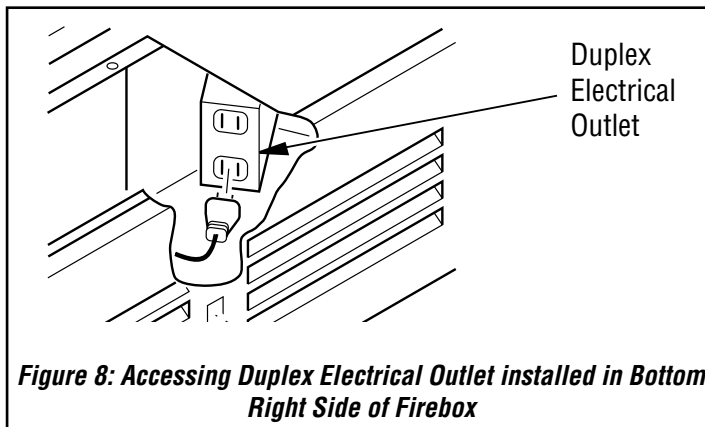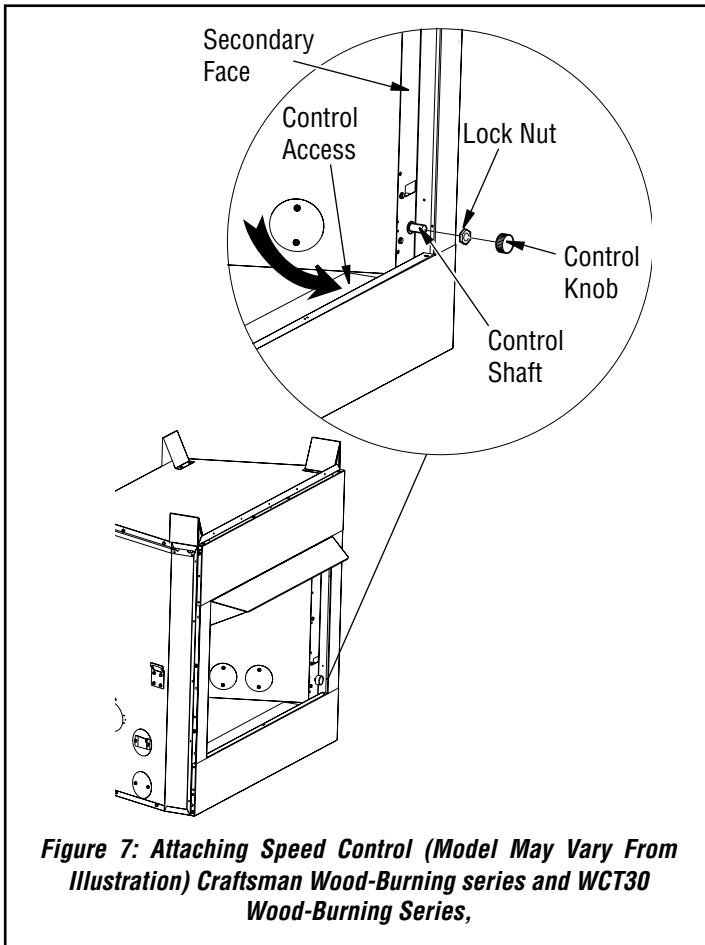

MODEL BK WIRE ASSEMBLY (if required)

Note: Speed control switches can not be installed into filigree panels. Installing a wall switch or thermostat in the wall outside of fireplace will eliminate removing bottom louver to adjust operation of blower.

1. Attach the power cord to the blower motor by firmly pushing the two female terminals at the end of the power cord onto the two spade terminals on the blower motor (*see Figure 9*).
2. Attach green ground wire from power cord to blower housing using screw provided (*see Figure 9*). Tighten screws securely with a Phillips screwdriver.
3. Place the blower against the lower rear wall of the firebox outer wrapper with the exhaust port directed upward. Depending on your model, you may have to carefully route the blower assembly past the controls and brackets, and position the blower inside the back opening. The blower will be held in position against the back wall by the magnets incorporated onto the blower housing (*see Figure 9*).
4. Be certain that all wire terminals are securely attached to terminals on blower motor and that the screw retaining the green ground wire is tight.

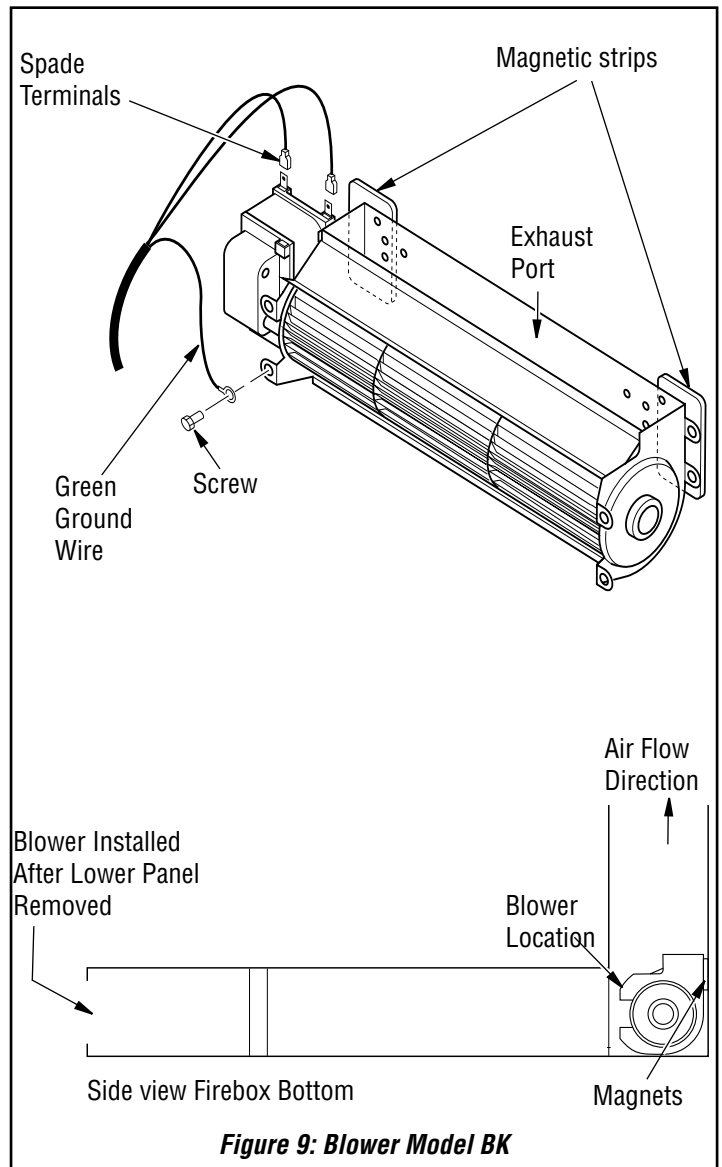


MODEL BKT WIRE ASSEMBLY (if required)

Note: The BKT blower is for application into direct-vent models only. When installing the BKT thermostatically-controlled blower, you must first secure the wiring connections from the thermal switch to the blower (if it has not already been factory installed).

1. Attach green ground wire from power cord to blower housing using screw provided (*see Figure 10*). Tighten screws securely with a Phillips screwdriver.
2. Connect wire harness and power cord terminals. Connect the jumper wire to the blower motor terminal to the terminal of the thermal switch. Connect one wire of the thermal switch and one wire to the other remaining blower motor terminal.

Note: The power cord outer insulation sleeve may have to be stripped slightly to allow enough wire length to reach and make all connections. DO NOT trim excessive length away. Just enable enough to make all connections securely.

3. Place the blower against the lower rear wall of the firebox outer wrapper with the exhaust port directed upward. Attach Thermal disc magnetic bracket to the bottom of the firebox sub-floor. The thermodisc must be oriented near the fireplace bottom as shown in Figure 6, in order to sense temperature and properly operate. The blower will be held in position against the back wall by the magnets incorporated onto the blower housing (*see Figure 10*).
4. Be certain that all wire terminals are securely attached to terminals on blower motor and that the screw retaining the green ground wire is tight.
5. To mount speed controls, see *Mounting Speed Control for All Direct Vent Models*, *Mounting Speed Control for All Models with Panel Louvers* (page 5, column 1) or *Mounting Speed Control for All Models with Stamped Face Louvers* (page 6, column 1), depending on your model.

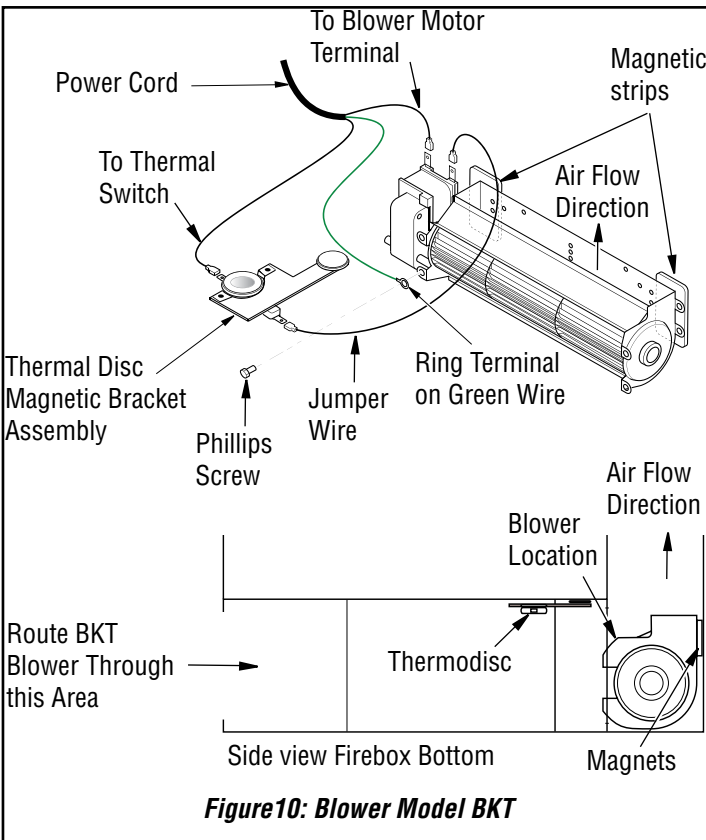


MOUNTING SPEED CONTROL

DIRECT-VENT MODELS

Mount the speed control box by placing the plastic control shaft forward through the mounting opening on the pre-installed bracket (*see Figure 11*).


While supporting the speed control in the vertical position, secure the control shaft by pushing and turning the lock nut with pliers until it is tight against the mounting bracket. Place control knob provided on the control shaft (*see Figure 11*).

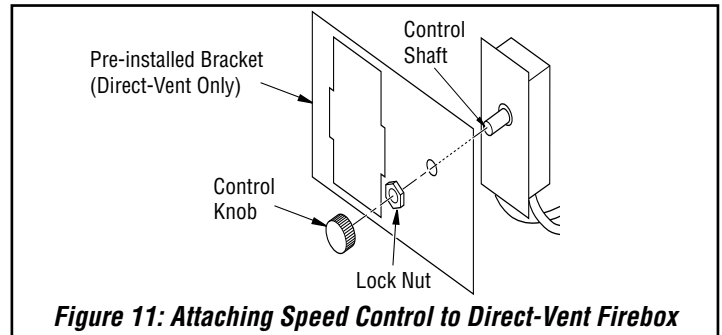

MODELS WITH STAMPED PANEL LOUVERS

Mission B-vent Series

1. Position speed control bracket by inserting flange of bracket between hearth pan and upper flange of louver opening, then seat bottom end of bracket onto lower flange of louver opening (*see Figure 12*).
2. Mount speed control box by placing plastic control shaft through bottom hole on speed control bracket. Top screw head on control box will fit inside top hole on bracket (*see Figure 12*). Secure speed control to bracket with lock nut by pushing and turning lock nut with pliers clockwise until it is tight against bracket.
3. Remove knockout plug from louver panel by depressing top and bottom retaining clips (*see figure 1 or 2, page 2*).
4. Place louver panel, louvers pointing up, back into framed opening. Align control shaft with rectangular opening by sliding control bracket along flange (*see Figure 12*).
5. Fully seat louver panel into frame opening by gently pressing along ends until all dimpled retainers have snapped in place.
6. Place control knob, provided, onto control shaft (*see Figure 12*).

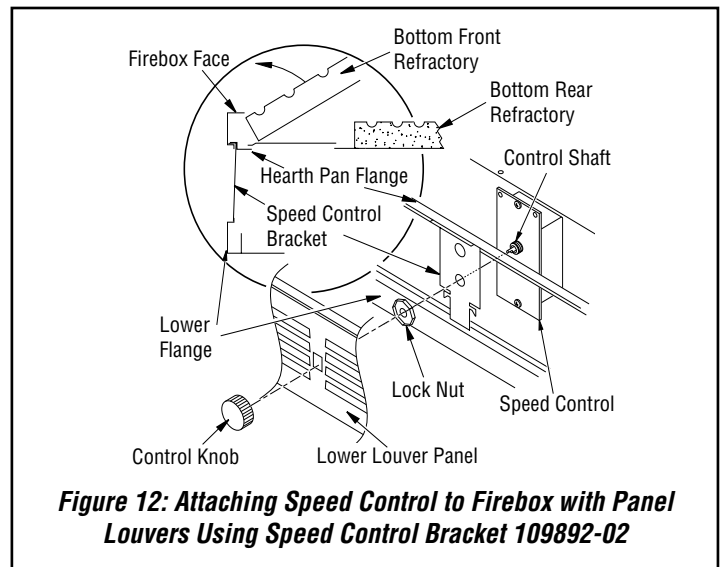


MOUNTING SPEED CONTROL *Continued*

MODELS WITH STAMPED FACE LOUVERS

WCT20 Wood-Burning Series Models

1. Using pliers, bend two retaining tabs on speed control bracket 90 degrees to front of bracket (*see Figure 13*).
2. Mount speed control box by placing plastic control shaft through bottom hole on speed control bracket. Top screw head on control box will fit inside top hole on bracket (*see Figure 13*). Secure speed control to bracket with lock nut by pushing and turning lock nut with pliers clockwise until it is tight against bracket.
3. Remove knockout plug from louver panel by depressing top and bottom retaining clips (*see Figure 1 or 2, page 2*).
4. Position speed control assembly over flange on hearth pan by sliding bracket up between the face and flange, then down until the control shaft is aligned with the opening in the louver panel (*see Figure 13*).
5. Lock two retaining tabs onto lower louver by pressing down on bracket assembly while sliding control knob through rectangular opening on louver and onto the control shaft (*see Figure 13*).

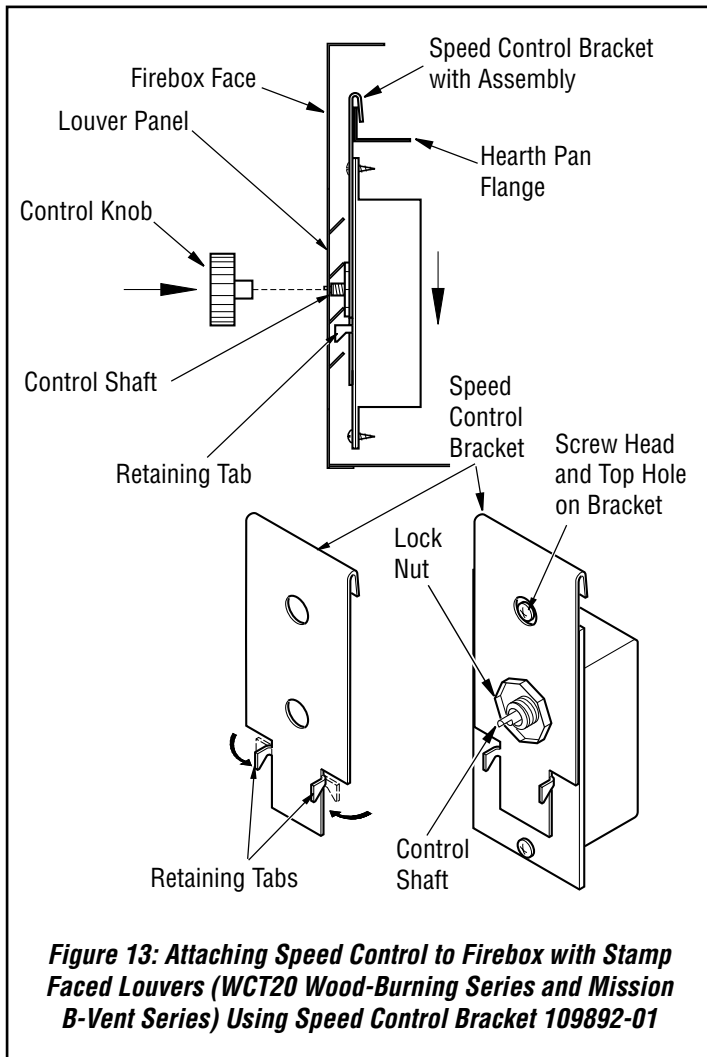




CONNECTING POWER AND OPERATING BLOWER



CAUTION

Never touch a blower wheel while in operation.

1. Check to make sure that the power cord is completely clear of the blower wheel and that there are no other foreign objects in blower wheel. Also double check all wire leads and make sure wire routing is not pinched or in a precarious position. Correct accordingly.
2. Turn on power to duplex outlet if previously turn off per the warning on *page 2*.
3. Plug in blower power cord to duplex outlet (see *Figure 8, page 4*).
4. BK Model: Turn blower on and check for operation. Turn blower off by turning knob fully counterclockwise before continuing.
5. BKT Model: The blower will only run when the speed control knob is in the ON position and the Thermal switch senses temperature after the fireplace begins to heat up. The blower speed can be adjusted by rotating the control knob. To turn off, turn knob fully counterclockwise until it clicks off. If the blower is ON and has been running with the fireplace operating, the blower will continue to run for a short time after the fireplace has been turned off. As the thermal switch cools down, the blower shuts down automatically.
6. Peel off the backing paper and stick the supplied wiring diagram decal on the firebox bottom approximately 12" in front of the blower (*see Figure 14*).
7. Replace all panels and/or brick bottom if previously removed.

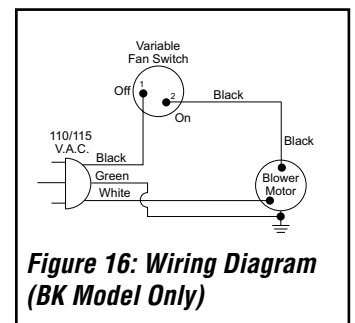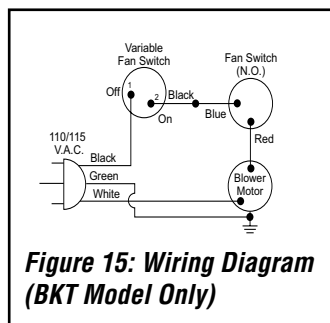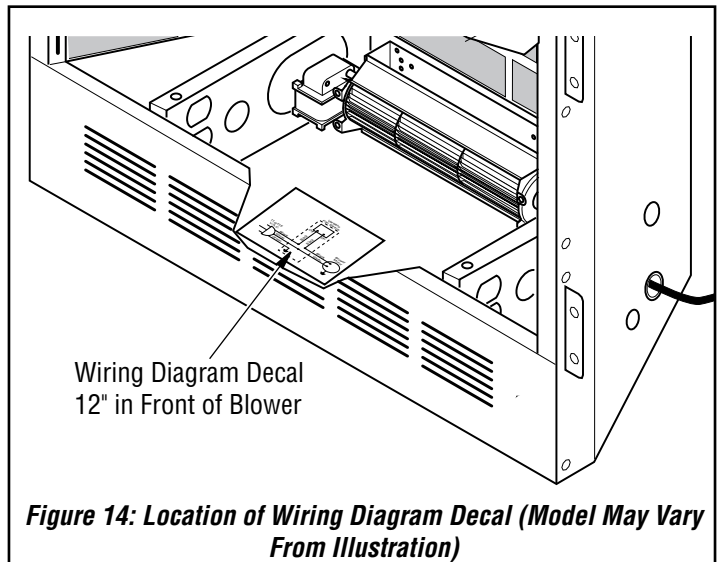

Innovative Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2022 Innovative Hearth Products LLC

P/N 127162-01 Rev. D 02/2024

1769 East Lawrence Street • Russellville, AL 35654