

**INSTALLATION INSTRUCTIONS FOR INSTALLING FACADE KITS  
FOR USE WITH BAINBRIDGE AND WCT4920WS WOOD-BURNING FIREPLACES**

**KIT CONTENTS**

**Arched and Square Louvered Facades -**

- 1 ea. Facade Assembly
- 1 ea. Fastener Package: 6 Button head screws
- 1 ea. Instruction Sheet

**Cleanface Facade -**

- 1 ea. Facade Assembly
- 1 ea. Fastener Package: 6 Button head screws, 8 hex head screws.
- 1 ea. Upper Convection Cover
- 1 ea. Instruction Sheet

**TOOLS/SUPPLIES NEEDED**

- 5/32" Allen wrench with ball end
- 5/16" Driver

Facade Kits		
Cat. No.	Model	Description
F4781	FLVAOBLK	Louvered Facade Kit with Arched Opening (must be paired with an arched door)
F4782	FCFSOBLK	Clean Face Kit with Square Opening (must be paired with a square door)
F4783	FLVSOBLK	Louvered Facade Kit with Square Opening (must be paired with a square door)

*Table 1*

**GENERAL INFORMATION**


These facade kits provide a decorative finished look to the fireplace.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

Read this instruction sheet in its entirety before beginning.

**ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.**

**SHUT DOWN THE APPLIANCE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.**

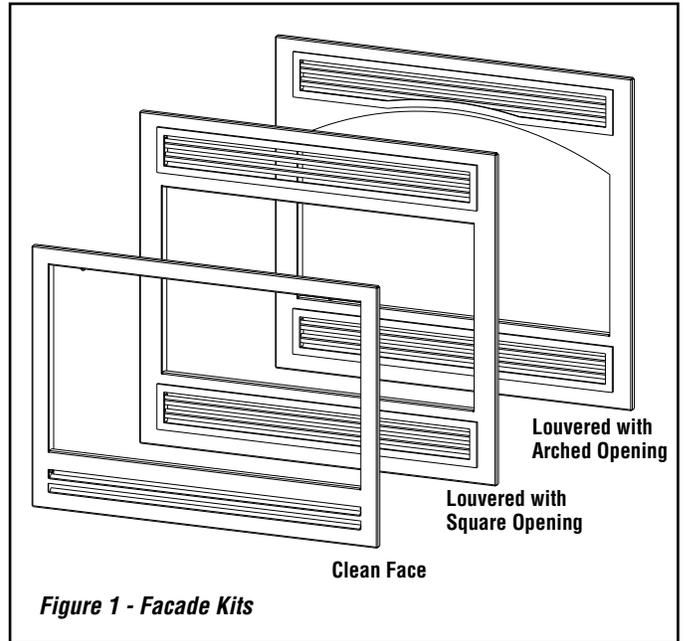

**INSTALLER: Leave this manual with the appliance.  
CONSUMER: Retain this manual for future reference.**

**INSTALLATION INSTRUCTIONS**


**! IMPORTANT NOTE**  
**Glass door assembly must be installed on fireplace prior to installing a facade.**

**LOUVERED FACADE KITS - Follow installation Instructions on Page 2.**


**CLEAN FACE KIT - Follow installation Instructions on Page 4.**

## INSTALLATION INSTRUCTIONS - LOUVERED FACADE KITS


1. Carefully unpack the facade. They both install identically (square opening facade shown).
2. The top and bottom louver assemblies must be removed from the facade before installation. Lift them upward and outward to disengage them from the screw heads they mount onto on both sides. See **Figure 2**.

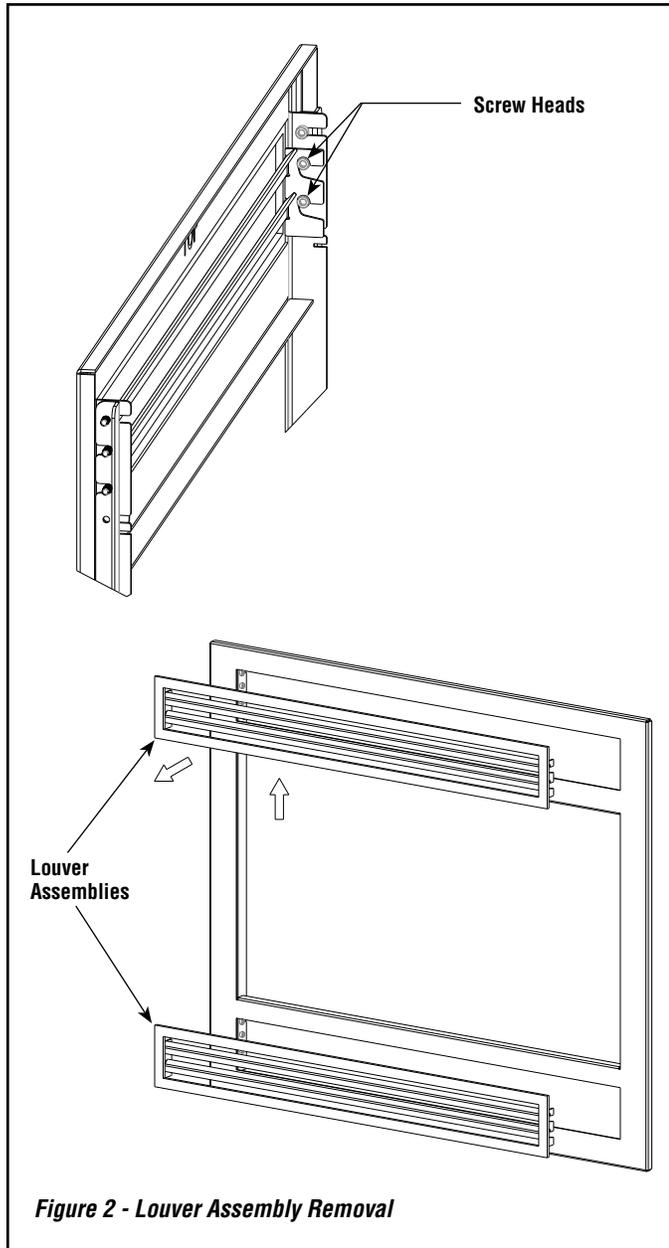

3. Place facedown on a soft surface such as a blanket or carpet to prevent scratching.
4. Loosen, but do not remove the screws holding the mounting brackets to the facade. See **Figure 3**.
5. Remove the mounting brackets from the facade assembly.

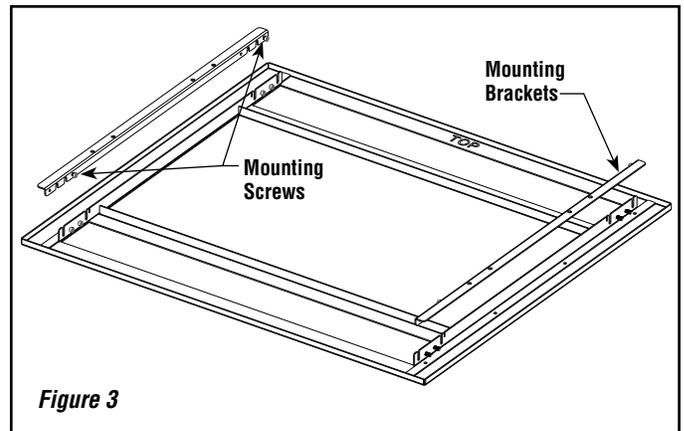


6. Mount both side mounting brackets in the same orientation they were removed from the facade. Plug both upper threaded inserts using provided hardware (six button head screws). See **Figure 4**.

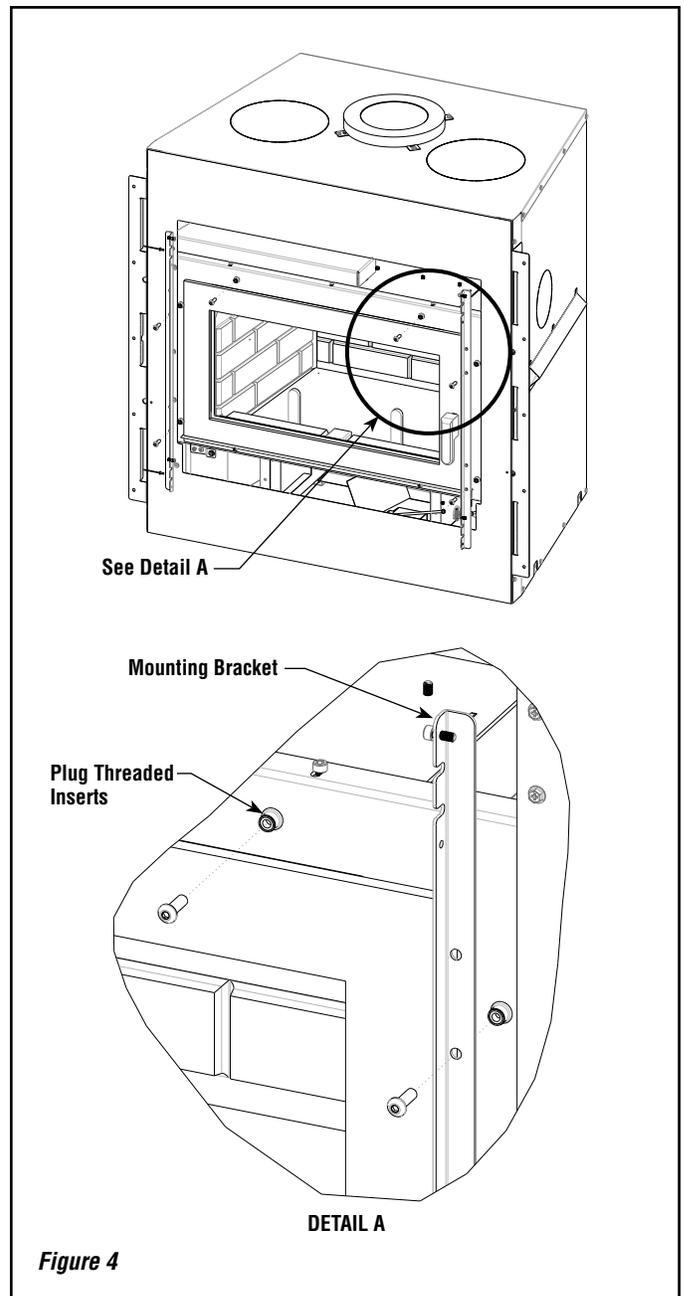


- Slide the facade mounting slots onto the four mounting screws located on the top and bottom of the side mounting brackets and tighten.


**NOTE:** The facade depth can be adjusted to cover facing materials ranging from 1/2" to 1" thick. For facing materials exceeding 1", room must be left for the façade to install within the facing material around its perimeter. See manual for dimensions and details.

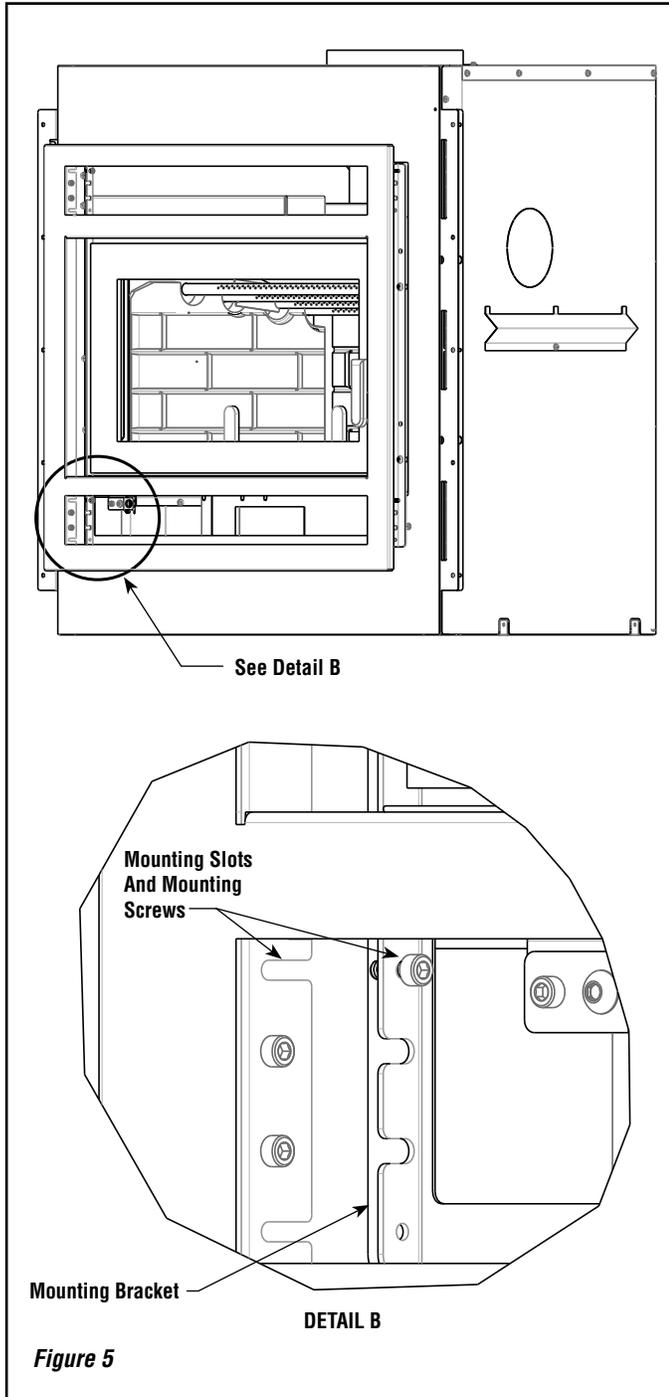


- Reinstall the louver assemblies to the facade by sliding inward and down to sit on the the screw heads as shown.

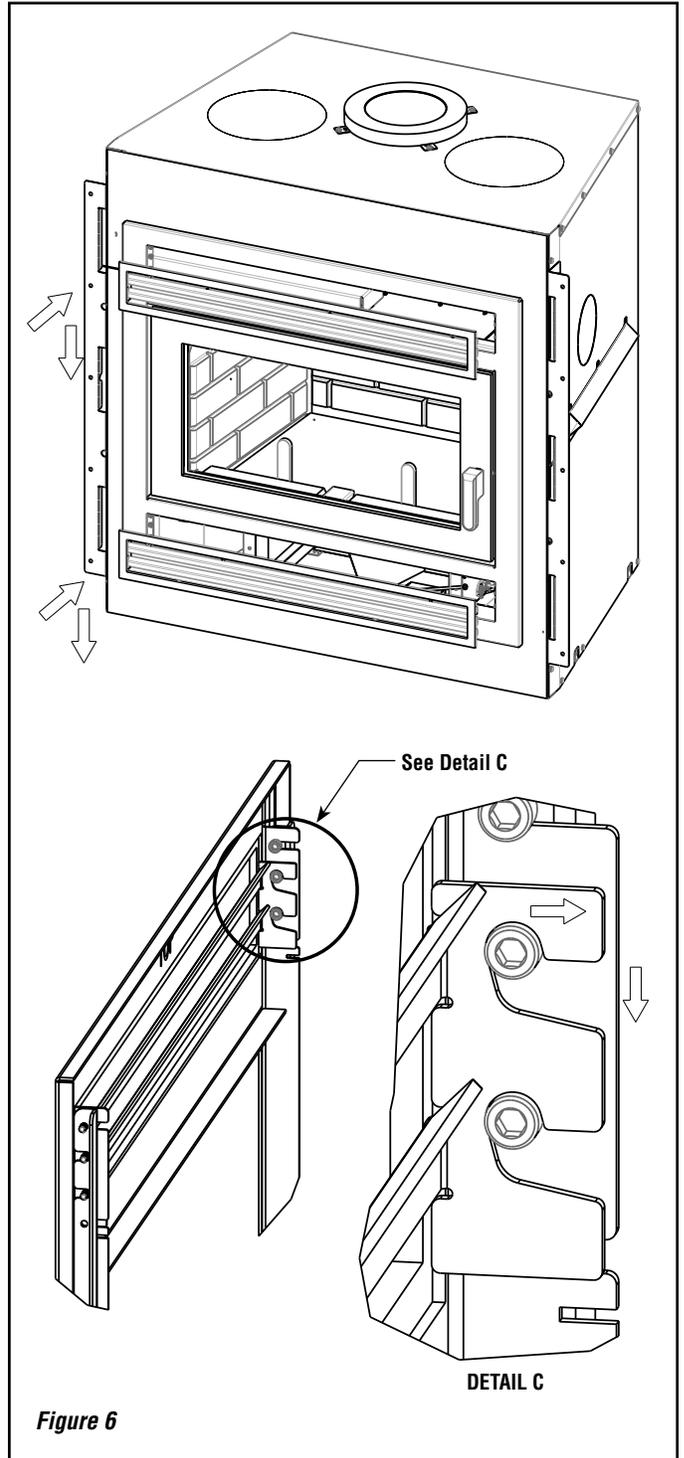

9. Locate the threaded insert on the damper assembly between the bottom louvers and install the damper lever by screwing in place. See **Figure 7**.

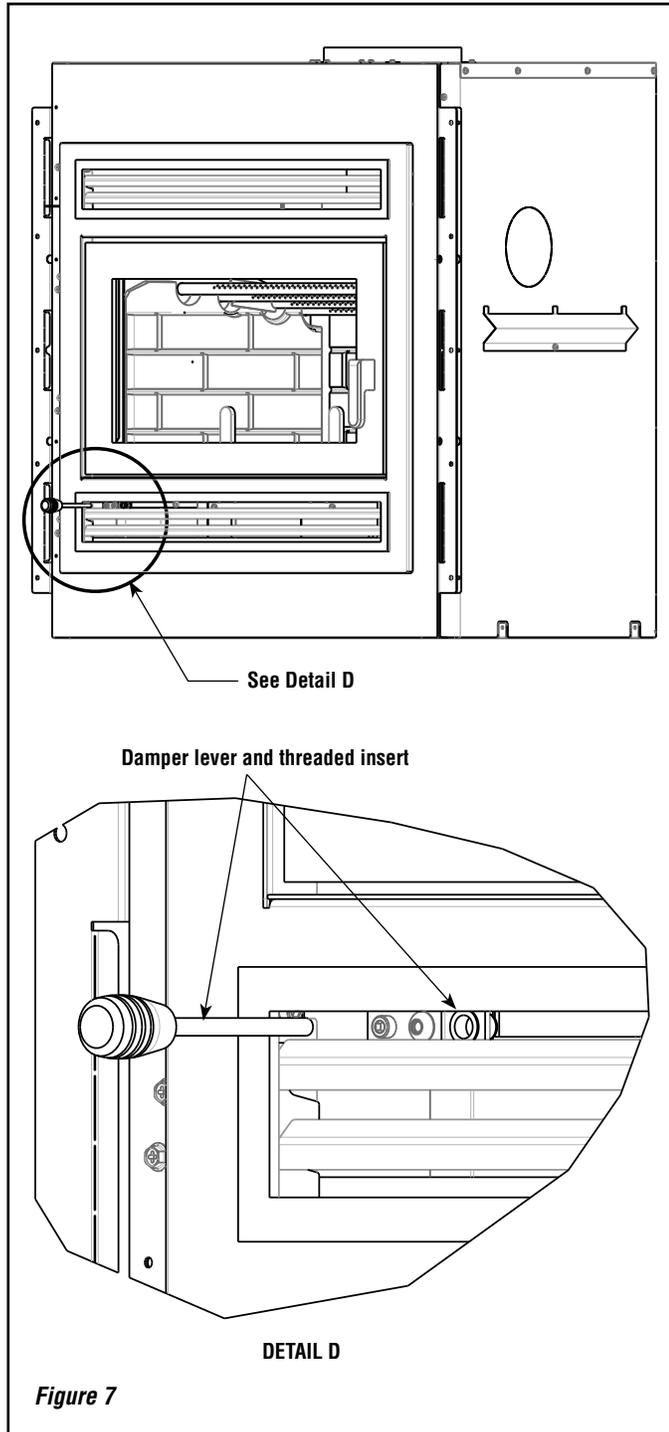

Install the Upper Convection Cover as shown using the provided hex head screws.

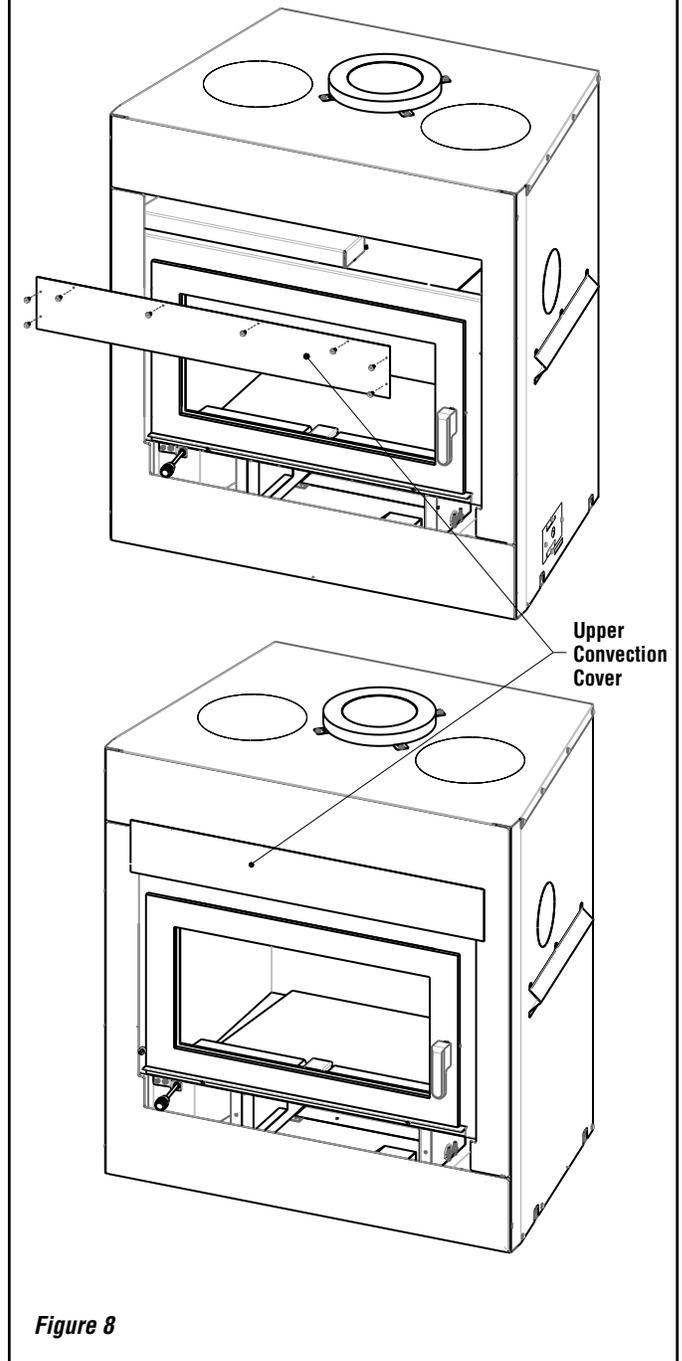


## INSTALLATION INSTRUCTIONS - CLEAN FACE KIT

1. Unpack the Clean Face Assembly and place facedown on a soft surface such as a blanket or carpet.
2. Install Convection Cover on fireplace using the hex head screws provided. See **Figure 8**.


**NOTE:** Convection Cover must be installed and paired with HeatFlo Kit when using the Clean Face!

3. Loosen but do not remove the screws holding the mounting brackets to the facade. See **Figure 9**.
4. Remove the mounting brackets from facade assembly.

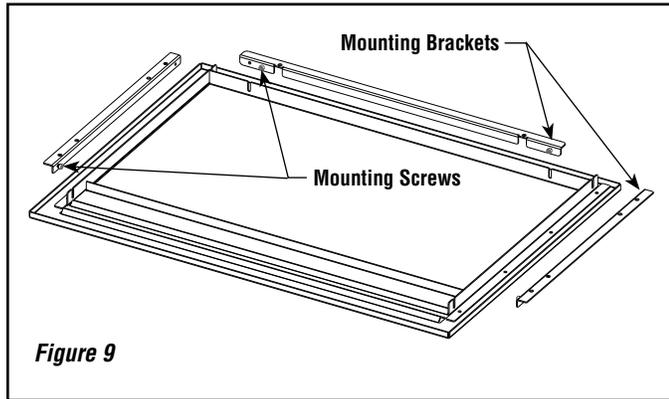

**Figure 9**


5. Mount the upper and both side mounting brackets in the same orientation they were removed from the facade, using provided hardware (six button head screws). See **Figure 10**.

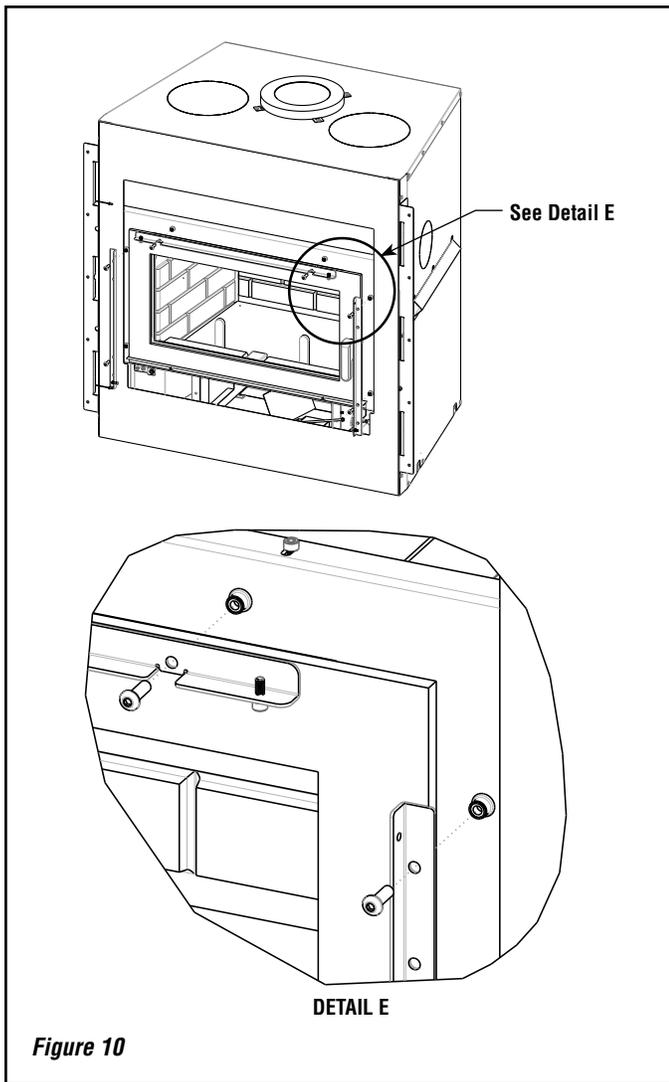


**Figure 10**

6. Slide the facade mounting slots onto the four mounting screws located on the top and side mounting brackets and tighten. See **Figures 10 and 11**.


**NOTE:** The facade depth can be adjusted to cover facing materials ranging from 1/2" to 1" thick. For facing materials exceeding 1", room must be left for the façade to install within the facing material around its perimeter. See manual for dimensions and details.

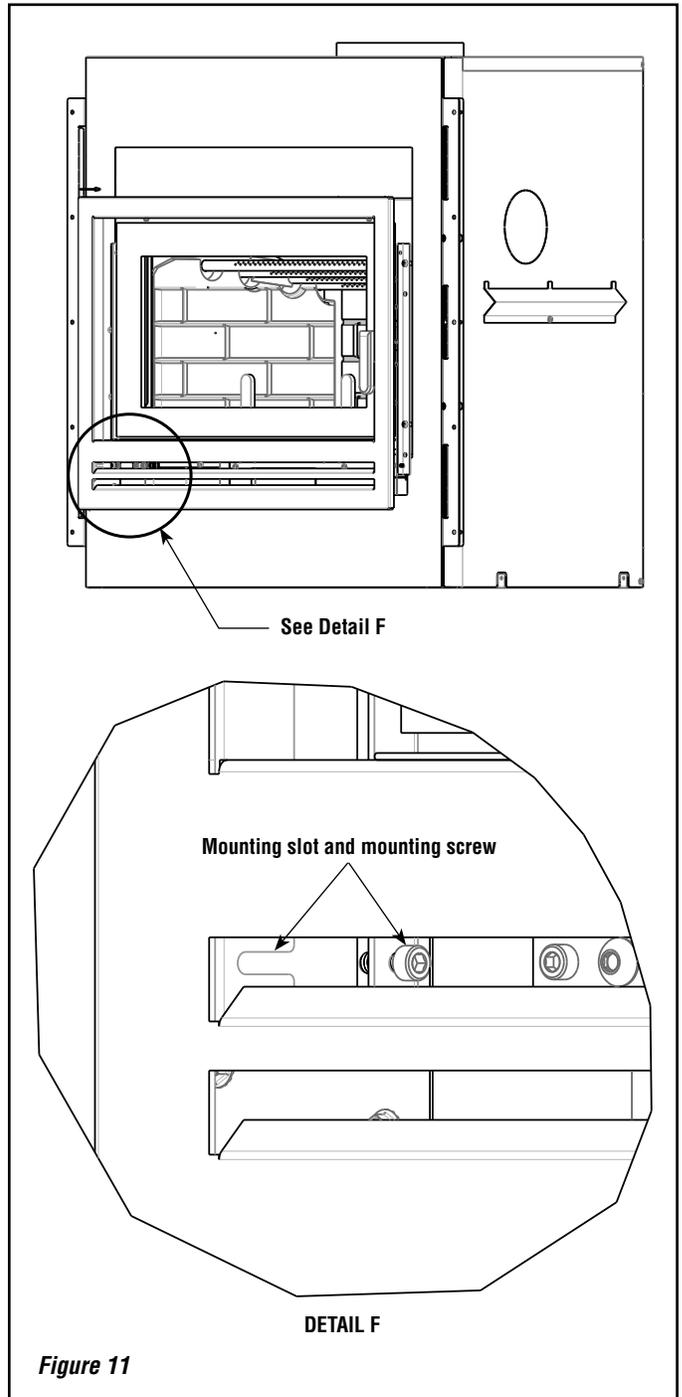

**Figure 11**

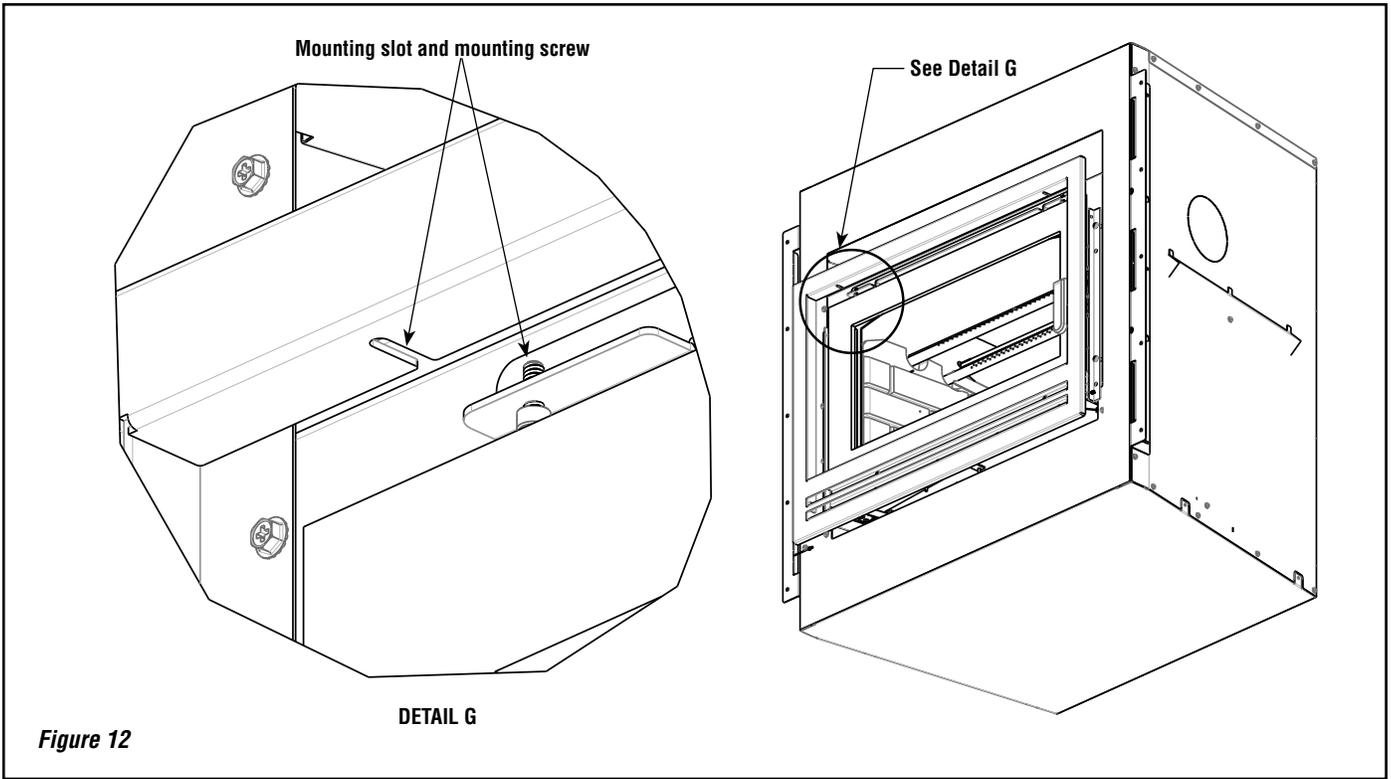

6. Locate the threaded insert on the damper assembly between the bottom louvers and install the damper lever by screwing in place. See **Figure 13**.

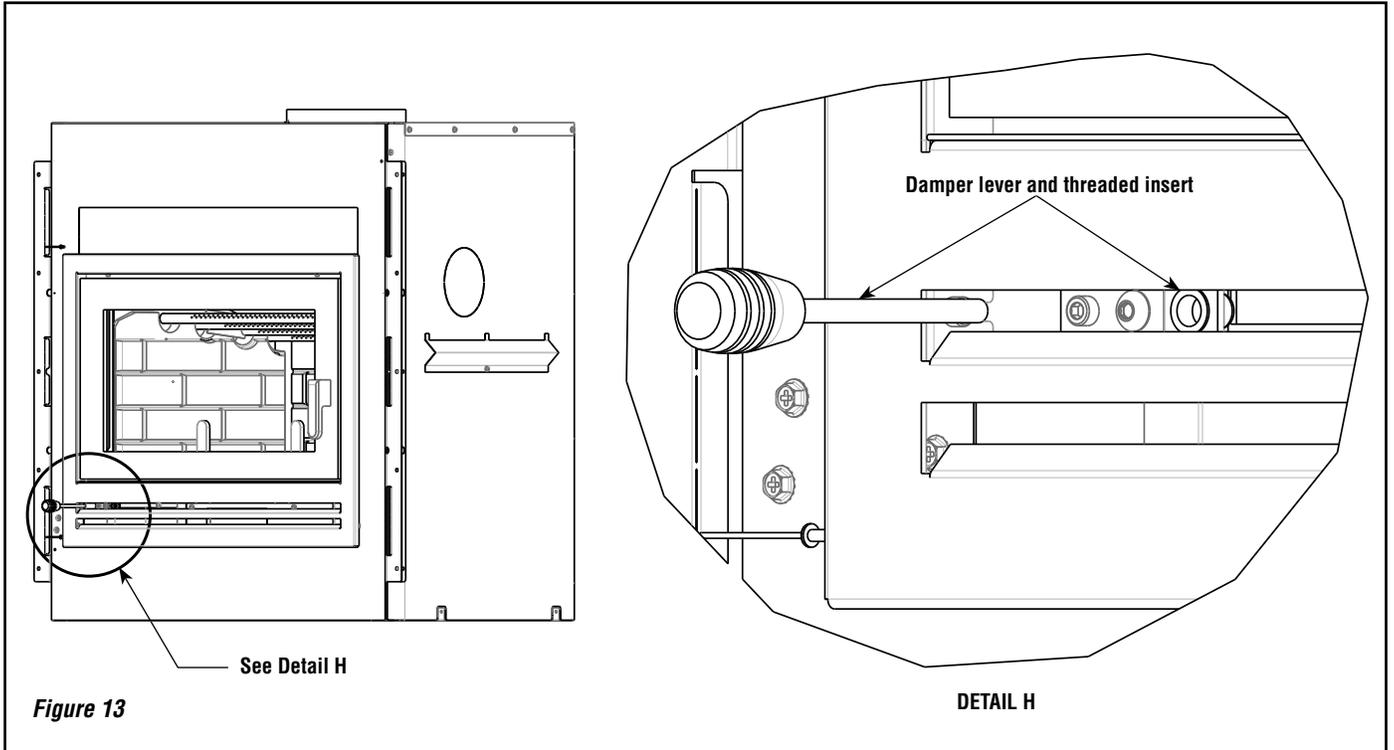

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.