STRIKER 160





OVERVIEW

- ♦ Tall opening provides and expansive view of the burning fire.
- OCERATION CERTAIN CONTROL OF CERTAIN CONTROL OF CERTAIN CERTAI
- Unique, integral air wash system keeps the glass clean and clear for a wide-open view of the fire.
- Precision-cut, heavy-gauge steel provides dependable, long-lasting operation.
- High-density firebrick retains heat longer, resulting in increased efficiency.
- One-touch control ensures easy operation and comfort.
- EPA-certified and Washington State-approved for clean and efficient operation.
- Limited Lifetime Warranty

OPTIONS

LEG/PEDESTAL STYLE



Cast Olympic Leg





Standard Pedestal

DOOR TRIM




Traditional Door Available on \$160, \$260, & \$T310



Arch Door Available on S160, ST210




Optional 700-CFM Variable speed blower

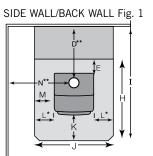

F†= Measured from corner of stove heat shield.

- *Measured from door opening.
- **Clearances to flue are from the stove flue collar to combustibles.

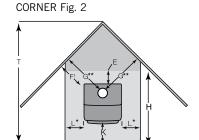

ALCOVE Fig. 3

		STRIKER 160		
Width		23-1/2"		
Height	Cascade Legs	27-1/2"		
	Olympic Legs	27-1/2"		
	Pedestal	31"		
Depth		17-3/4"		
Stovepipe Diameter		6"		

	STRIKER 160				
	US Single-Wall Connector	US Double-Wall Connector	Canada Single-Wall Connector	Canada Double-Wall Connector	
D**= Flue Collar to Back Wall	16"	10"	19"	13"	
N**= Flue Collar to Side Wall	21"	18"	24"	21"	
G**= Flue Collar to Wall	18"	13-1/2"	21"	16-1/2"	

E = Back of Stove	O"	O"	8"	8"
F [†] =Stove Corner to Wall	9-3/4"	5-1/2"	_	_
H = Pad Depth Minimum	33-3/4"	33-3/4"	43-3/4"	43-3/4"
I = Pad Depth to Back Wall	47-3/4"	41-3/4"	49-3/4"	43-3/4"
J = Pad Width Minimum	36"	36"	39-1/2"	39-1/2"
K = Front of Stove	16"	16"	18"	18"
L = Measured from Door Opening	8"	8 ⁿ	_	_
M = Measured to Sides of Unit	_	_	8"	8 ¹¹
T = Pad Depth to Corner	58-1/2"	52"	64-3/4"	58-1/2"

	STRIKER 160		
X = Minimum Width	48"	44"	
Y = Maximum Depth	48"	48"	
Z = Minimum Height	84"	72"	

IMPORTANT NOTES:
As with any heating appliance, fireplace or stove, this appliance is extremely hot during operation. Read and understand all operating instructions before using this appliance. For further information, consult your dealer. Actual performance may vary depending upon home design and insulation, ceiling heights, climate, condition and type of wood used, appliance location, burn rate, accessories chosen, chimney installation and how the appliance is operated. Grandview 230 approved for mobile home use. Diagrams, illustrations and photographs are not to scale—consult installation instructions. Product designs, materials, dimensions, specifications, colors and prices are subject to change or discontinuance without notice.

F†= Measured from corner of stove heat shield.

*Square-leet heating capacities and burn times are approximations only. Actual performance may vary depending upon home design and insulation, ceiling heights, climate, condition and type of wood used, appliance location, burn rate, accessories chosen, chimney installation and how the appliance is operated.

*Clearances to flue are from the stove flue collar to combustibles. ***Depending on the type of wood being burned and the amount of heat required.





