

Sumter™ 1600 Wood Stove

Appliance Specifications - Wood-Burning Stove

Product Reference Information			
Cat. No.	Description	Shipping Weight	Shipping Volume
F5030	Sumter™ 1600 Wood-Burning Stove	280 lb.	23 cu. ft.

NOTES:

- Dimensions shown are approximations only (+/- 1/4")
- Diagrams, illustrations and photographs are not to scale—consult installation instructions. Product designs, materials, dimensions, specifications, colors and prices are subject to change or discontinuance without notice.
- Approved for residential and manufactured (mobile) home installations.
- Optional Kits Available: Blower and Outside Air Kit

❶ Square-foot heating capacities and burn times are approximations only. Actual performance may vary depending upon home design and insulation, ceiling heights, climate, condition and type of wood used, appliance location, burn rate, accessories chosen, chimney installation and how the appliance is operated.

The Sumter 1600 woodstove is safety listed with the following agency:

- PFS TECO, Tested to UL 1482-2022, CAN/ULC-S627:2023






Report No. 14-186

Certified to comply with EPA 2020 particulate emission standards using crib wood.
Emissions value: 1.7 g/hr

Specifications

Stove Pipe Diameter Single Wall or Double Wall	6"
Log Length	16" Max.
Firebox	Volume = 1.52 cu. ft.
Cord Wood: ❶	55,600 BTUs/hr.
Maximum Burn Times ❶	6-8 hours
Heating Capacity ❶	700 to 1,400 sq. ft.

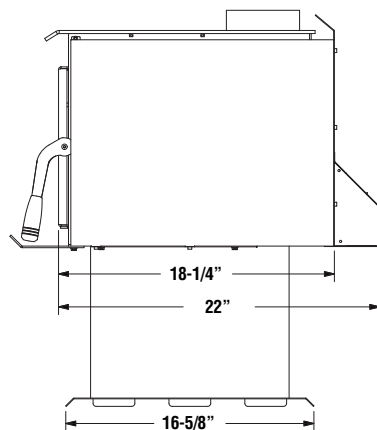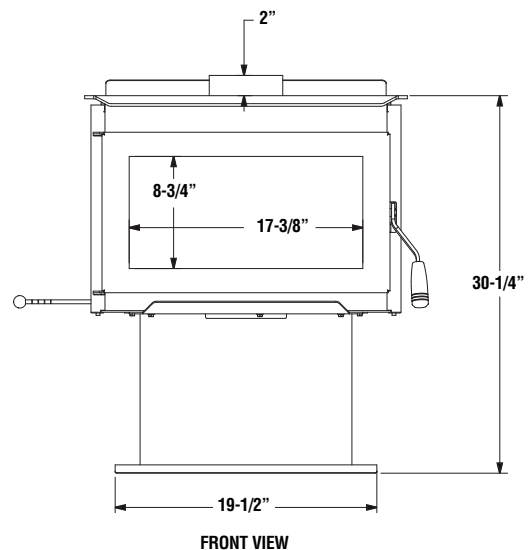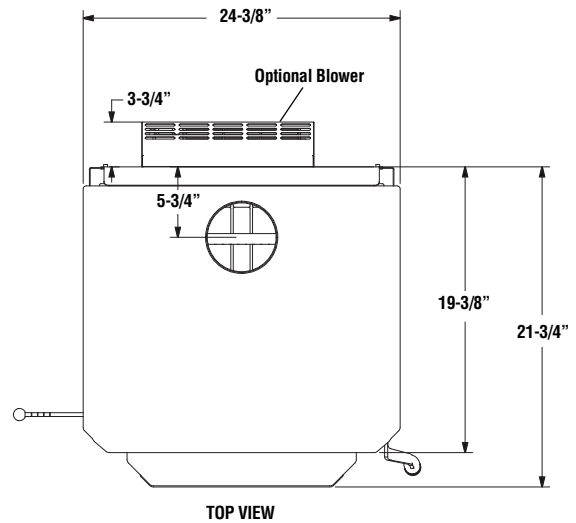


Notes

 
Listing

Dimensions

Sumter™ 1600 Wood Stove

Clearances

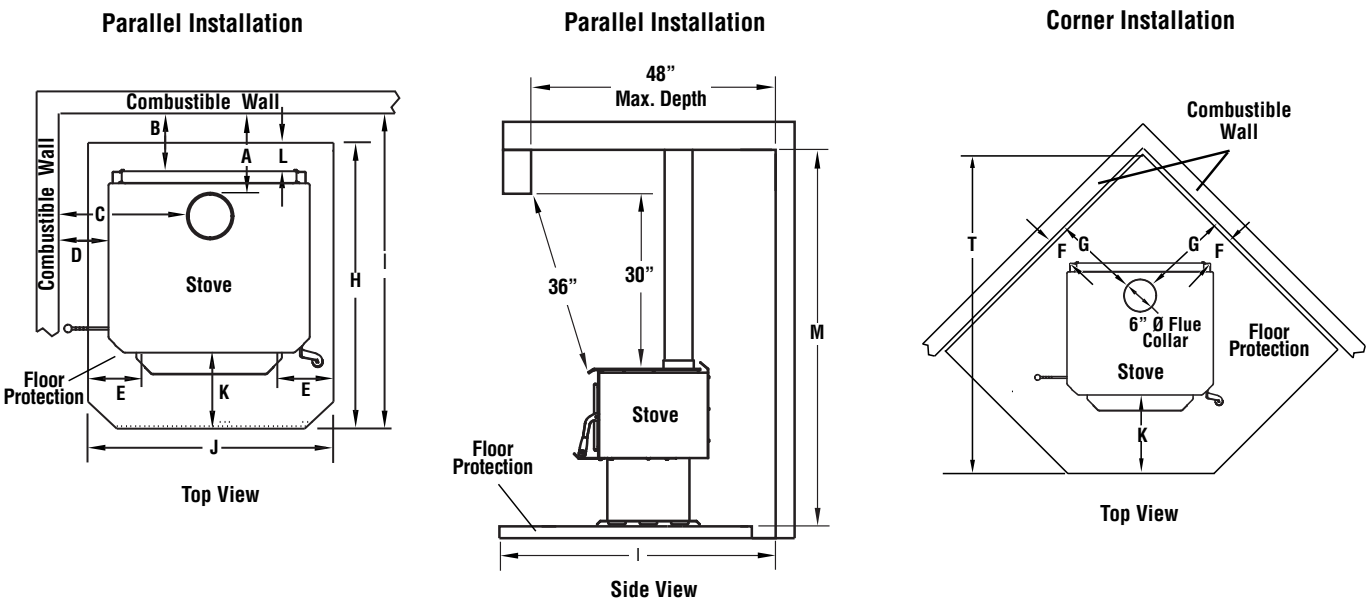

USA - inches																
PIPE	INSTALLATION		A (3)	B (1)	C (3)	D (1)	E (8)	F (1)	G (3)	H (2)	I (6)	J (2)	K (7)	L (5)	M	T (6)
Single Wall	Residential		14-1/4	11-1/2	23	13-3/8	8	9	18	37-5/8	49	34-7/8	16	0	84	61-1/2
Double Wall	Residential or Mobile Home		12	9-1/8	19-1/2	9-5/8	8	6	15	37-5/8	46-3/4	34-7/8	16	0	84	57-1/2

Footnotes:

- 1- These dimensions to the stove body are for reference only. Actual distances should be measured from the stove's flue collar.

2- Minimum noncombustible hearth pad dimensions.

3- Clearances to connector pipe shall be measured from the flue collar of the stove.
- 6- Reference dimension only, to assist in planning the installation.

7- Measured from front of floor protection to the front of firebox.

8- 8" from door opening.