P/N 104185-01
Rev. F, 04/2017

GWMT1 WALL MOUNTED THERMOSTAT KIT

GWMT1 WALL MOUNTED THERMOSTAT KIT

[FOR USE WITH MODELS: BLAZE&GLOW18/24, MAGNIFLAME24/30, MULTI-SIDED27 NORTHERNOAK27, DUAL-FLAME EOS18, MONTEBELLO18/24, SHERIDAN18/24, RIOLIGHTS24/30, CIS VF SVYD18, MNF24/30/36, GLOW RAMP BGE18/2436, MULTI-SIDED FVFM27, VF18/24, DUAL BURNER VD1824, SINGLE BURNER VS1824, BILTMORE18/24/30, SOMERSET27 FVFM27, MULTI-SIDED FVFM27]

KIT CONTENTS

1 ea. Thermostat Assembly
1 ea. 25 Ft. Wire
2 ea. Mounting Screws
1 ea. Instruction Sheet



Cat. No.	Model	Description
F2040	GWMT1	Wall Mount T-Stat Control Kit

GENERAL INFORMATION

This kit is for use with IHP manufactured Remote-Ready appliances listed above.

READ ALL THE STEPS BEFORE STARTING THE INSTALLATION

THE APPLIANCE MUST BE OFF AND COLD BEFORE BEGINNING.

ALL WARNINGS, PRECAUTIONS AND INSTRUCTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact you local distributor or dealer.

If any of these parts are missing or damaged, contact your dealer or IHP.us.com for referral information.

⚠ WARNING

Do not connect this thermostat or log set to an electrical source! Electrical shock and/or fire hazard will occur.

INSTALLATION AND CONNECTION

***NOTE**: Remove factory installed jumper wire (if installed). Jumper wire is connected to TP/TH and TH terminals if applicable.*

1. Connect one wire terminal to the “TH” terminal and the other wire terminal to the ''THTP'' terminal on the control valve *(see **Figure 2**).*
2. Route the 25 ft. wire to a convenient location.

***IMPORTANT**:* The wire may be shortened but must not be lengthened. The thermostat should be mounted 54” above the floor in a location where there is good air circulation. Avoid heat sources such as lamps, direct sunlight, fireplace, or heat and air conditioning ducts.

3. Gently remove the cover of the thermostat from the base. Grasp the sides of the cover and separate from the base.
4. Feed the electrical wires through the rectangular slots as shown in ***Figure 1***.
5. Connect one bare wire end to each terminal (“W” and “R”) of the thermostat base.
6. Install the base onto the wall with the provided screws.
7. Move the temperature adjustment back and forth to ensure the bi-metal is free from restrictions.
8. Replace the cover onto the base. (Upon installation, the thermostat must be allowed to stabilize at room temperature for a minimum of 30 minutes for proper operation).
9. Set the temperature adjustment to the desired setting. This thermostat has been electronically calibrated at the factory. No adjustment or leveling is necessary.

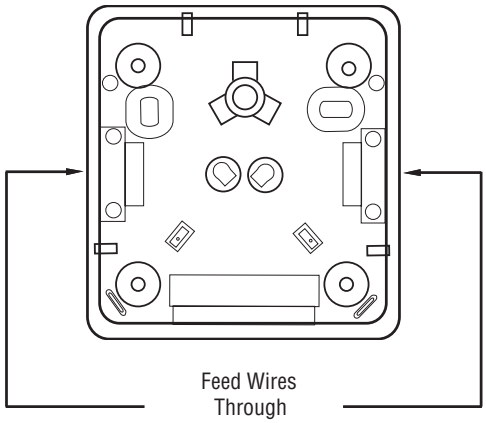


Figure 1 - Feeding Wires Through

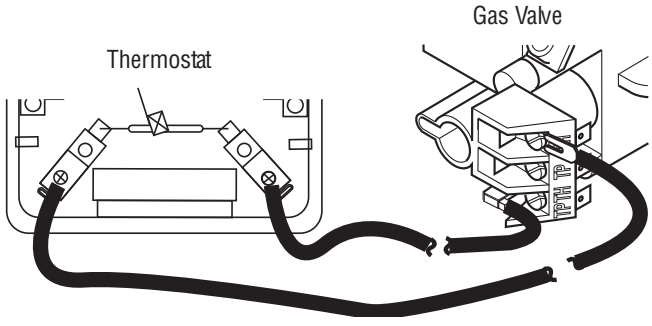


Figure 2 - Connecting Wire Terminals

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2012 Innovative Hearth Products
P/N 104185-01 Rev. F 04/2017

IHP
1508 Elm Hill Pike, Suite 108 • Nashville, TN 37210