P/N 127321-01
Rev. B, 04/2017


GA6080 DAMPER CLAMP KIT FOR VENTED OPERATION

GA6080 DAMPER CLAMP KIT FOR VENTED OPERATION

[FOR USE WITH APPLIANCE MODELS BLAZE&GLOW18/24, MAGNIFLAME24/30, MULTI-SIDED27 NORTHERNOAK27, DUAL-FLAME EOS18, MONTEBELLO18/24, SHERIDAN18/24, MNF24/30/36, GLOW-RAMP BGE18/24/30/36, MULTI-SIDED FVFM27, VF18/24, DUAL-BURNER VD1824, SINGLE-BURNER VS1824, WHISPERING24, BILTMORE18/24/30, RIVERCYN24, WHITEMTN24, SOMERSET27 FVFM27]

KIT CONTENTS

1 ea. Damper Clamp
1 ea. Instruction Sheet

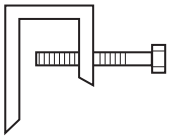

Cat. No.	Model	Description
F1760	GA6080	Damper Clamp (Required in vented applications.)

REQUIRED TOOLS AND SUPPLIES

None

GENERAL INFORMATION

You may use the heaters listed above as a vented product. There are three reasons for operating your heater in the vented mode.

1. The fireplace does not meet the clearance to combustible requirements for vent-free operation.
2. State or local codes do not permit vent-free operation.
3. You prefer vented operation.

If reasons number 1 or 2 above apply to you, you must permanently open the chimney flue damper. The damper clamp will keep the damper open and ensure vented operation.

See ***Tables 1 and 2*** for minimum permanent flue opening you must provide. Attach damper clamp so the minimum permanent flue opening will be maintained at all times.

READ ALL THE STEPS BEFORE STARTING THE INSTALLATION

THE APPLIANCE MUST BE OFF AND COLD BEFORE BEGINNING.

ALL WARNINGS, PRECAUTIONS AND INSTRUCTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact you local distributor or dealer.

If any of these parts are missing or damaged, contact your dealer or IHP.us.com for referral information.

NOTICE: Manual control heaters may be used as a vented product. If so, you must always run heater with chimney flue damper open. If running heater with damper open, noncombustible material above fireplace opening is not needed.

Area of Various Standard Round Flues	
Diameter	**Area**
5"	20 sq. inches
6"	29 sq. inches
7"	39 sq. inches
8"	51 sq. inches

Table 1

Chimney Height	Minimum Permanent Flue Opening
6' to 15'	39 sq. inches
15' to 30'	29 sq. inches

Table 2

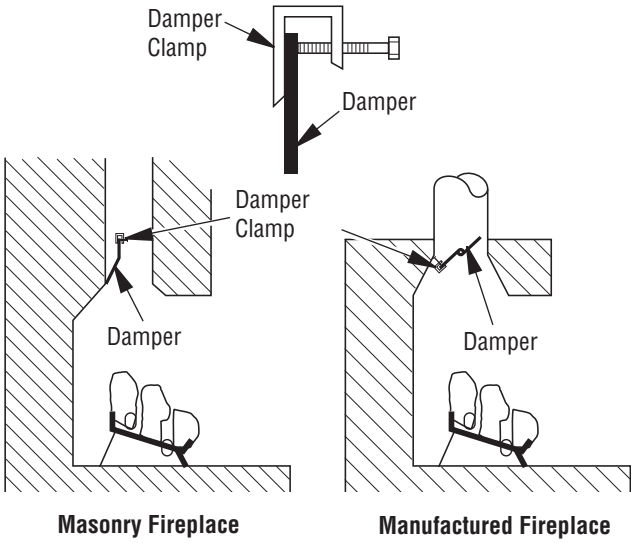


Figure 1 - Attaching Damper Clamp

2. Place ember material around front and sides of unit close to (but NOT on) he burner *(see **Figure 3**)*. Embers will "glow" when heated to enhance the realistic look of your log set.



Figure 3 - Placing Ember Material

3. Place fiber log pieces randomly on volcanic stone and ember material around unit *(see **Figure 4**)*.



Figure 4 - Placing Fiber Log Pieces

4. Use remaining volcanic stone to blend the floor media together. Your finished effect should resemble ***Figure 5***.



Figure 5 - Floor Media Kit Installed

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2004 Innovative Hearth Products
P/N 127321-01 Rev. B 04/2017

IHP
1508 Elm Hill Pike, Suite 108 • Nashville, TN 37210