P/N 775291M
Rev. C, 01/2015


**DOOR TRIM KITS
MODEL EPIC™**

INSTALLATION INSTRUCTIONS FOR INSTALLING DOOR TRIM KITS FOR USE WITH EPIC™ DIRECT-VENT GAS STOVES

KIT CONTENTS

Please ensure that all these parts are included

2 ea. Trim Pieces
6 ea. Nuts
6 ea. #6 Washers
1 ea. Instruction Sheet

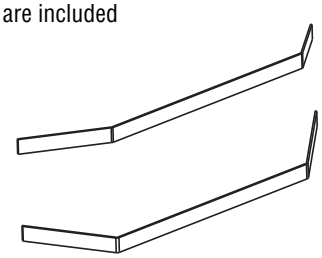

TOOLS NEEDED:

5/16" nut driver or socket wrench

Cat. No.	Model	Description
75348	EPIC-TRIM-B	Black Trim Kit
75349	EPIC-TRIM-G	Gold Trim Kit
75350	EPIC-TRIM-BN	Brushed Nickel Trim Kit
75351	EPIC-TRIM-BKN	Black Nickel Trim Kit

GENERAL INFORMATION

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact you local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation.

All of these parts may scratch and bend, great care should be used in handling them.

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

TURN OFF THE STOVE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

CAUTION: Always ensure that plated surfaces are clean and free of fingerprints before lighting stove. Fingerprints will leave permanent blemishes if left on plated surface when lit. When installation is complete, the trim should be gently cleaned with a soft cloth and either alcohol or a household glass cleaner. Do not overtighten nuts, overtightening can create visible dimples on the plated surface.

INSTALLATION INSTRUCTIONS

Step 1. Remove the trim pieces and hardware from its packaging and ensure that all pieces are present before beginning installation. Take care not to scratch finished surfaces.

Step 2. Facing the stove pull open the left side door.

Step 3. Unlatch the front door and swing it open (See ***Figure 1***).

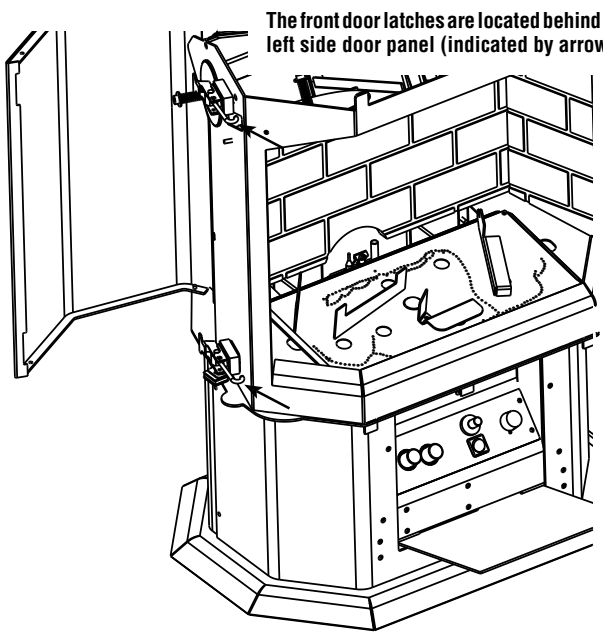


Figure 1 - Front Door Latches

Step 4. Put trim in place by inserting trim studs into the corresponding holes in the barrier (see ***Figure 2***). The top and bottom trim pieces will only fit in one direction.

Step 5. Install barrier with trim onto the front door.

Step 6. Place one washer on each stud (see ***Figure 2***). Using a 5/16" nut driver, snug up the nuts on each piece of trim.

Step 7. Finish tightening nuts. **CAUTION - DO NOT OVERTIGHTEN NUTS.**

Step 8. Close the front door and secure latches (see ***Figure 1***). Close left side panel door. Use a household glass cleaner or alcohol and a soft cloth to remove any fingerprints from all plated surfaces **prior** to firing the stove. **Read Caution on *Page 1***.

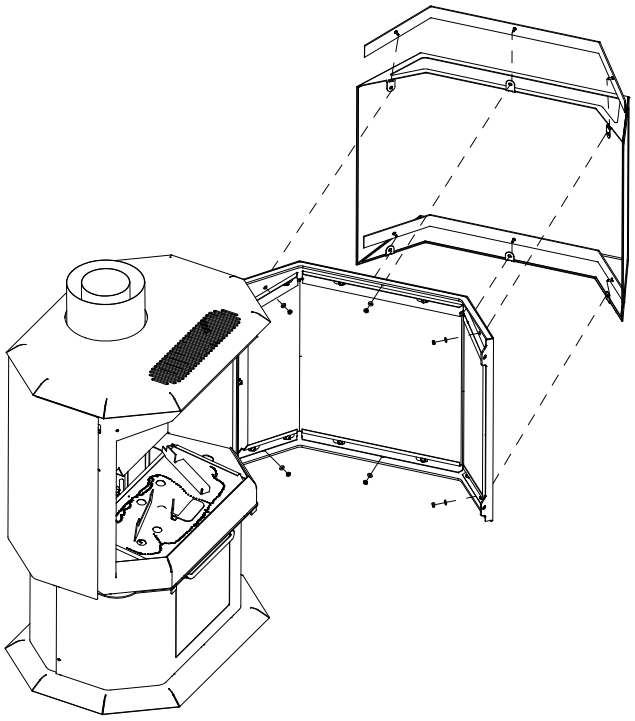


Figure 2

NOTE: DIAGRAMS AND ILLUSTRATIONS ARE NOT TO SCALE.

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

INNOVATIVE HEARTH PRODUCTS

Printed in U.S.A. © 2008 Innovative Hearth Products

1508 Elm Hill Pike, Suite 108 • Nashville, TN 37210