HEARTH PRODUCTS
KITS AND ACCESSORIES

INNOVATIVE HEARTH PRODUCTS

900933-00 REV. NC 10/2018

RIVROCK-25PK

INSTALLATION INSTRUCTIONS FOR RIVROCK-25PK KIT MEDIA

FOR USE IN ASTRIA ALLUMEDLX60TEN, ALLUME60TEN AND SUPERIOR DRL4060TEN FIREPLACES

Table Of River Rock Media		
Catalog Number	Model Number	Contemporary Media Name
F3775	RIVROCK-25PK	River Rock - 25 Piece Kit



⚠ WARNING

Only use materials listed here. Only contemporary media authorized have been tested for use within the firebox and its environment. Do not attempt to use any different materials in the fireplace. Doing so may be dangerous and will void the warranty and will result in incomplete combustion, sooting, and poor flame quality.

⚠ WARNING

If media are not installed according to the installation instructions, flame impingement and improper combustion could occur and result in soot and/or excessive production of carbon monoxide (CO), a colorless, odorless, toxic gas.

⚠ WARNING

Handle glass door with extreme care! Glass door is susceptible to damage – do not scratch or handle roughly while removing or installing the glass door.

TOOLS REQUIRED

1 Pair of gloves for handling media.

GENERAL INFORMATION

The River Rock Media is to be used as a decorative addition to the fireplace models listed on this instruction sheet. **Please read this instruction sheet in its entirety before applying this Contemporary Media**.

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

TURN OFF THE FIREPLACE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

CAUTION: TURN OF GAS TO THE APPLIANCE AND LOCK OUT ANY ELECTRICAL SWITCHES.

PREPARING THE FIREPLACE FOR RIVER ROCK MEDIA INSTALLATION

1. To access the glass door securing latches, first remove trim kit (if installed) and screen barrier from fireplace.
2. Lift the barrier to clear the bottom channel and swing the bottom of the barrier out. Then lower the barrier to clear the top channel.
3. Detach the four (4) door latches on top of firebox.
4. Swing the top of the glass door away from the fireplace at about 15° angle.
5. Carefully grip the door at the top and bottom, and remove it from the fireplace. Place the door in a safe location for later re-installation.

INSTALLING THE MEDIA

Install the River Rocks

IMPORTANT: **Reflective glass liner panels (if applicable) should be installed before any of the media are installed.**

Note: **Glass media is required. River rocks cannot be installed without glass media installed.**

Note: **Maximum of 4 kits of river rocks when using river rocks alone with glass media.**

Note: **Maximum of 2 kits of river rocks when using river rocks combined with driftwood logs and glass media.**

NOTE: The area for installing the river rocks measures 57" x 9-1/2"; burner area is located along the center of this dimension.

1. Spread the glass media in a thin layer, evenly over the burner and pan media. Make sure not to place any media over the pilot shield cover.

   NOTE: Do NOT mound the media.

2. Place river rocks over the glass media, in any aesthetically pleasing manner to suit individual taste. See Figures 1 and 2 for an example.

IMPORTANT: **Be sure river rocks do not impinge on the burner outlet.**

Re-Installing Glass Door, Access Door Cover and Barrier

1. Retrieve the glass door. Visually inspect the gasket on the backside of the frame. Gasket surface must be clean, free of irregularities and seated firmly.
2. Position the door in front of the firebox opening with the top of the door held away from the fireplace at 15° angle. Hook the bottom flange of the door frame over the bottom of the firebox frame.
   NOTE: Ensure the glass door is centered—with even spacing on each side.
3. Let the top of the glass door swing gently in towards the fireplace ensuring that the gasket seats evenly as the door draws shut. Securely fasten the four (4) latches on firebox top to secure door in place.
4. Install the access door into rectangular opening in front of the glass door with the slanted side facing forward. Insert tabs on sides of access door into slots on retaining brackets.
5. Install the barrier by sliding in into the top channel with the flat side toward the fireplace, then swinging the base of the barrier into the bottom channel and lowering it into place.

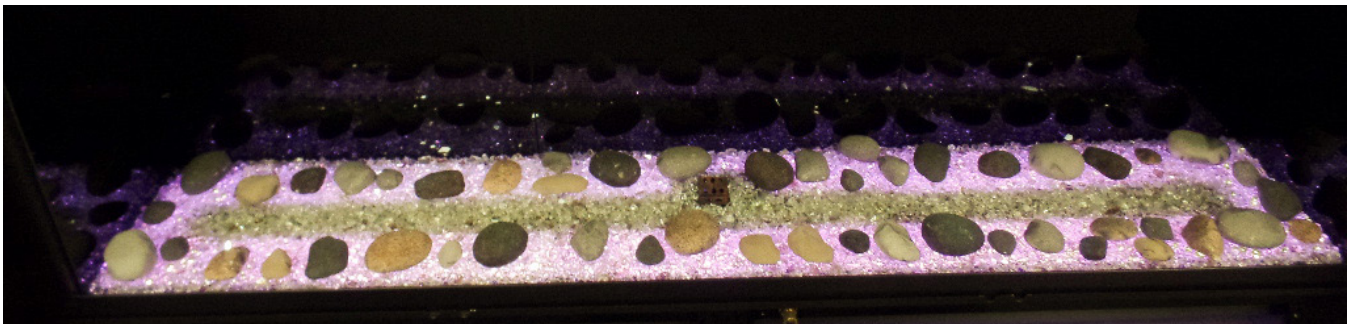


Figure 1 - Glass Media and River Rocks placement



Figure 2 - Glass Media, River Rocks and Driftwood Logs

Innovative Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2018 Innovative Hearth Products LLC

INNOVATIVE HEARTH PRODUCTS

P/N 900933-00 Rev. NC 11/2018

1769 East Lawrence Street • Russellville, AL 35654