INNOVATIVE HEARTH PRODUCTS


900934-00 REV. B 12/2019

REFLECTIVE GLASS LINER KIT

INSTALLATION INSTRUCTIONS FOR REFLECTIVE GLASS LINER KIT

FOR USE IN ASTRIA ALLUMEDLX60TEN, ALLUME60TEN AND SUPERIOR DRL4060TEN FIREPLACES

Reflective glass liner Table		
Catalog Number	**Model Number**	**Description**
F3776	CGLK-BLK-LIN60	Glass Liner, 5 pc, Reflective Black
F3777	CGLK-WHT-LIN60	Glass Liner, 5 pc, Reflective Ivory

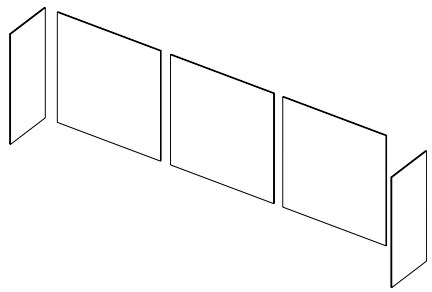

IMPORTANT NOTICE

REFLECTIVE GLASS LINER KIT SHOULD BE INSTALLED BEFORE ANY MEDIA IS INSTALLED.

⚠ WARNING

Only use materials listed here. Only authorized materials have been tested for use within the fireplace and its environment. Do not attempt to use any different materials in the fireplace. Doing so may be dangerous and will void the warranty and will result in incomplete combustion, sooting, and poor flame quality.

KIT CONTENTS

2 ea. Glass Side
3 ea. Glass Rear
1 ea. Instruction Sheet

TOOLS NEEDED (NOT SUPPLIED)

Electric Drill/Driver Gun (optional)
Phillips Screwdriver/Phillips Bit
5/16 Nut Driver
1 pair of gloves
Glass Cleaning Supplies.

GENERAL INFORMATION

The reflective glass liner kit is intended to be used as a decorative addition to single sided application fireplace models listed on this instruction sheet. Please read this instruction sheet in its entirety before applying this kit to the fireplace.

NOTE: **THIS KIT IS ONLY APPLICABLE TO SINGLE SIDED UNITS.**

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

Refer to the appliance installation instructions and care and operations manual (iico) for detailed instructions.

TURN OFF THE FIREPLACE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

TURN OFF GAS AND POWER TO THE APPLIANCE AND USE LOCKOUTS TO PREVENT ACCIDENTAL/UNSAFE OPERATION.

PREPARING THE FIREPLACE FOR REFLECTIVE GLASS LINER INSTALLATION

Accessing The Fireplace

1. To access the glass door securing latches, first remove trim kit (if installed) and screen barrier from fireplace.
2. Lift the barrier to clear the bottom channel and swing the bottom of the barrier out. Then lower the barrier to clear the top channel.
3. Detach the four (4) door latches on top of firebox.
4. Swing the top of the glass door away from the fireplace at about 15° angle.
5. Carefully grip the door at the top and bottom, and remove it from the fireplace. Place the door in a safe location for later re installation.

INSTALLATION

Installing Reflective glass liner (Kits F3776/F3777)

Note: **The use of gloves is recommended while handling the glass to avoid injury as well to avoid finger prints.**

With the fireplace in place and the accessories removed, follow these steps to install the reflective glass liner panels.

1. Open the glass liner kit, identify the glass liner panels; 3 of the same size are for the rear and 2 of the same size are for the left/right sides.
2. Remove 8 screws holding four(4) retaining brackets from underneath firebox top, sides and rear, save screws and retaining brackets for re-installation (***Figure 1***).
3. Install the left and right side glass liner panels, insert the glass liner panel in the firebox bottom channel using 2 retaining brackets and screws removed in step 2.
4. Install the three rear glass liner panels using 2 retaining brackets and screws removed in step 2, starting from the left to right side (***Figure 1***).

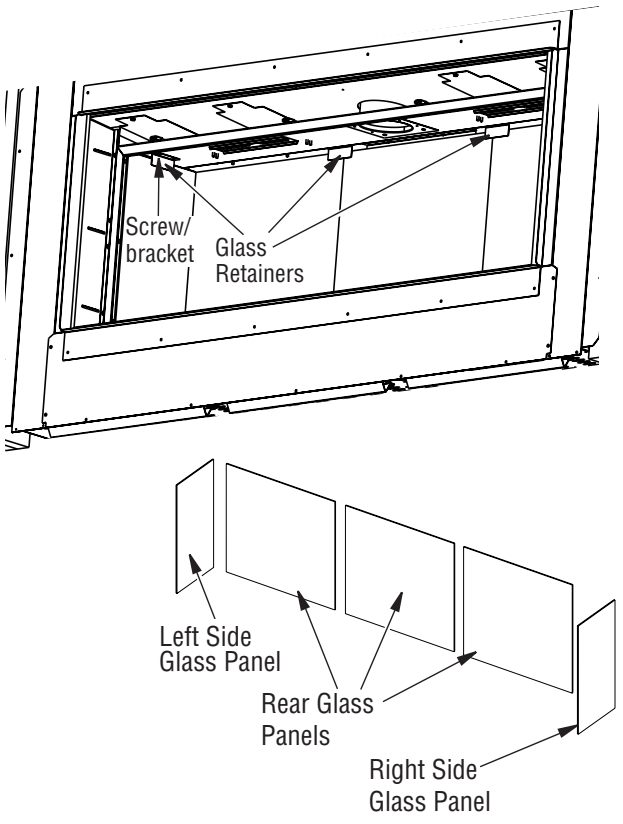


Figure 1 - Installing Reflective glass liner Panels

5. Clean the glass liner panels with appropriate glass cleaner to remove finger print marks.
6. After the installation of reflective glass liner panels, proceed with reinstalling the media kits if removed (glass media, logs, river rocks).

Re-Installing the Glass Door, Barrier, and Trim

1. Retrieve the glass door. Visually inspect the gasket on the backside of the frame. Gasket surface must be clean, free of irregularities and seated firmly.
2. Position the door in front of the firebox opening with the top of the door held away from the fireplace at a 45° angle. Hook the bottom flange of the door frame over the bottom of the firebox frame.

   NOTE: Ensure the glass door is centered—with even spacing on each side.
3. Let the top of the glass door swing gently in towards the fireplace ensuring that the gasket seats evenly as the door draws shut. Securely fasten the four (4) latches on firebox top to secure door in place.
4. Install the barrier by sliding in into the top channel with the flat side toward the fireplace, then swinging the base of the barrier into the bottom channel and lowering it into place.
5. Install the trim assembly (If removed) to the front of the fireplace.

Innovative Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2018 Innovative Hearth Products LLC

P/N 900934-00 Rev. B 12/2019

INNOVATIVE HEARTH PRODUCTS

1769 East Lawrence Street • Russellville, AL 35654

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.