P/N 901035-00
REV. NC 10/2019

REPLACEMENT FLUE COLLAR KITS

INSTALLATION INSTRUCTIONS FOR REPLACEMENT SNAP-PAK FLUE COLLAR KITS FOR USE WITH FIREPLACE MODELS LISTED IN TABLE 1

REPLACEMENT FLUE COLLAR KITS Snap-Pak Collar and Sleeve	
Cat. No.	**Where Used *(page/figure for installation instructions)***
F4191	Montecito Estate CAT, WCT6940WS ***(Page 1, Figure 1)***
F4189	Montecito, WCT6820WS ***(Page 2, Figure 2)***
F4188	Brentwood SP, Brentwood LV, WCT/WRT4820WS ***(Page 2, Figure 3)***
F4190	Ladera CAT, WRT3920WS ***(Page 3, Figure 4)***
F4192	Villa Vista, Villa Vista CD, WRT4826WH ***(Page 3, Figure 5)***
Table 1	

GENERAL INFORMATION

These replacement flue collar kits are used with the fireplace models that use Snap-Pak chimney and are listed in ***Table 1***.

Read this instruction sheet in its entirety before beginning.

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

SHUT DOWN THE APPLIANCE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

INSTALLATION INSTRUCTIONS *(Figures 2 Through 5)*


MONTECITO ESTATE CAT AND WCT6940WS

To install the new Snap-Pak Collar/Sleeve Assembly:

1) Remove the four existing screws attaching the old collar/sleeve assembly to the top of the unit.

2) Pull the existing collar and sleeve up, and discard/ recycle.

3) Install the collar plate aligning the inside slots with the existing holes in the top, install the new collar aligning the tab holes with the holes in the collar plate and making sure that the flue collar on top of the firebox is completely inside the sleeve of the collar/sleeve assembly.

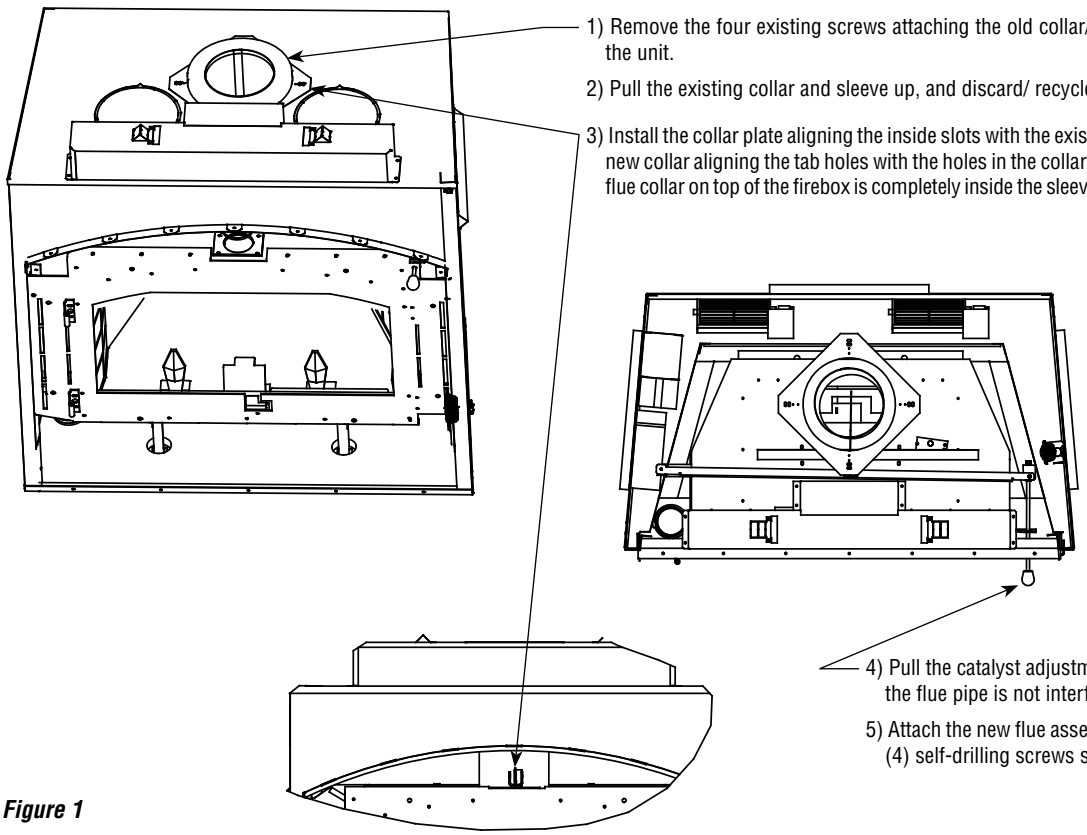


4) Pull the catalyst adjustment knob in and out to ensure the flue pipe is not interfering with it's operation.

5) Attach the new flue assembly to the unit using the four (4) self-drilling screws supplied.

Figure 1

MONTECITO AND WCT6820WS

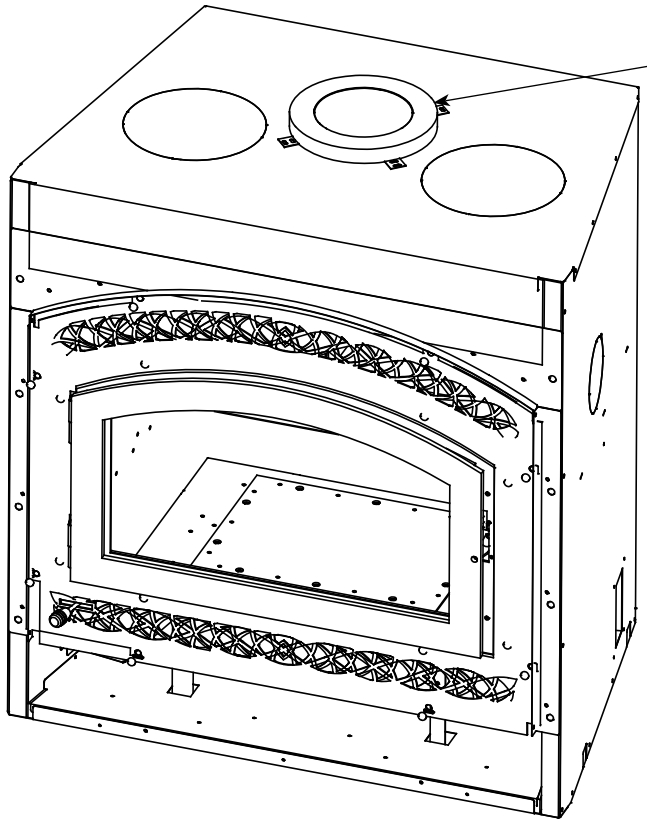


To install the new Snap-Pak Collar/Sleeve Assembly:

1) Remove the four existing screws attaching the old collar/ sleeve assembly to the top of the unit.
2) Pull the existing collar and sleeve up, and discard/recycle.
3) Install the install the new collar on top of the firebox.
4) Attach the new flue assembly to the unit using the four (4) self- drilling screws supplied.

Figure 2

BRENTWOOD SP, BRENTWOOD LV, WCT4820WS AND WRT4820WS

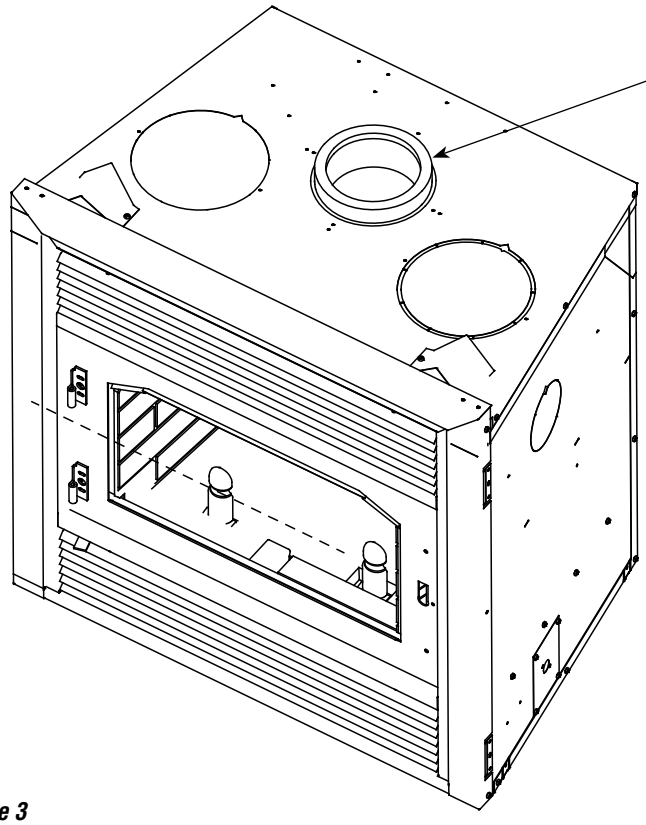


To install the new Snap-Pak Collar/Sleeve Assembly:

1) Remove the four existing screws attaching the old collar/sleeve assembly to the top of the unit.
2) Pull the existing collar and sleeve up, and discard/recycle.
3) Install the install the new collar on top of the firebox.
4) Attach the new flue assembly to the unit using the four (4) self-drilling screws supplied.

Figure 3

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

LADERA CAT AND WRT3920WS

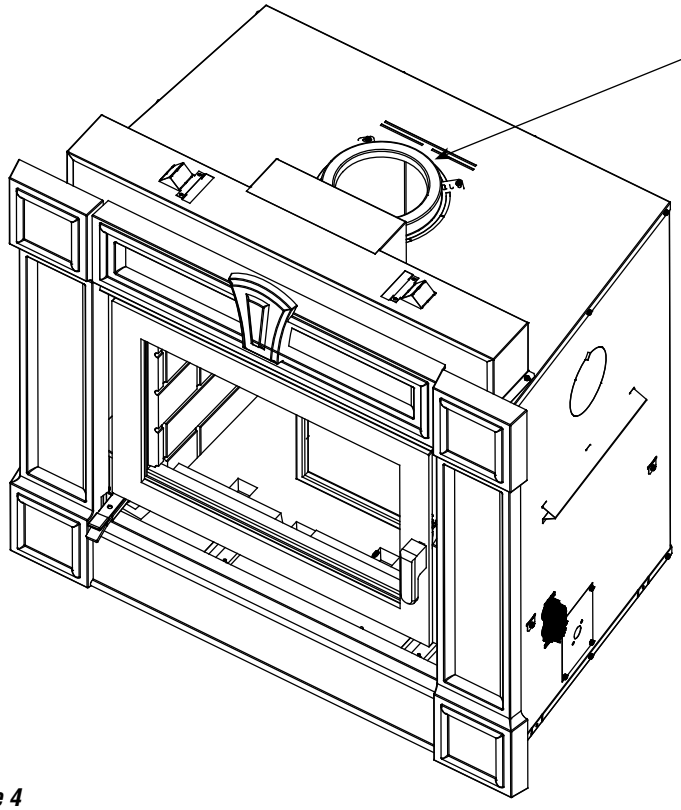


To install the new Snap-Pak Collar/Sleeve Assembly:

1) Remove the thermometer probe from the front of the of the unit.
2) Remove the four existing screws attaching the old collar/sleeve assembly to the top of the unit.
3) Pull the existing collar and sleeve up, and discard/recycle.
4) Install the new collar making sure that the flue collar on top of the firebox is completely inside the sleeve of the collar/sleeve assembly and the hole in the pipe is aligned with the thermometer bracket holes.
5) Reinstall the thermometer probe through the hole in the flue pipe.
6) Attach the new flue assembly to the unit using the four (4) self-drilling screws supplied.

Figure 4

VILLA VISTA, VILLA VISTA CD AND WRT4826WH

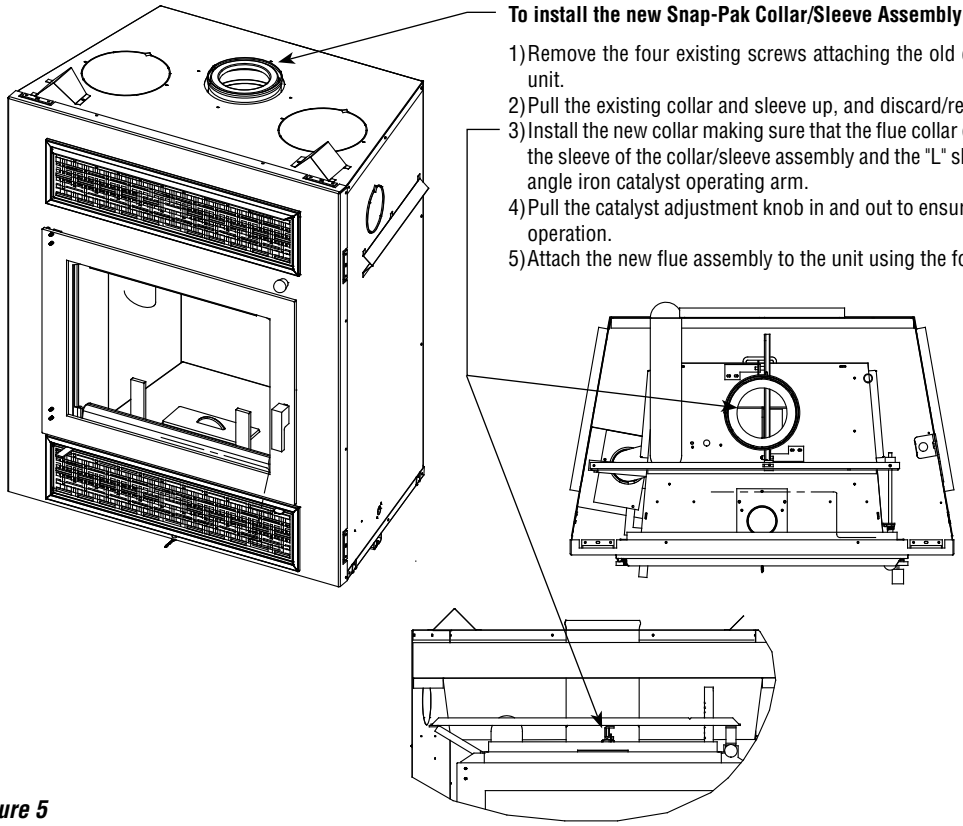

To install the new Snap-Pak Collar/Sleeve Assembly:

1) Remove the four existing screws attaching the old collar/sleeve assembly to the top of the unit.
2) Pull the existing collar and sleeve up, and discard/recycle.
3) Install the new collar making sure that the flue collar on top of the firebox is completely inside the sleeve of the collar/sleeve assembly and the "L" shaped hole in the pipe is aligned with the angle iron catalyst operating arm.
4) Pull the catalyst adjustment knob in and out to ensure the flue pipe is not interfering with it's operation.
5) Attach the new flue assembly to the unit using the four (4) self-drilling screws supplied.

Figure 5

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2019 Innovative Hearth Products

INNOVATIVE HEARTH PRODUCTS

1769 East Lawrence Street • Russellville, AL 35654