INNOVATIVE HEARTH PRODUCTS

900796-00

P/N 900796-00
Rev. A, 02/2022

CHARRED OAK AND DRIFTWOOD LOG SETS

INSTALLATION INSTRUCTIONS FOR INSTALLING DRIFTWOOD AND CHARRED OAK* LOG SETS FOR USE WITH SCORPIOCD-C, DRC3000-B, SCORPIO, SCORPIO-B, DRT3500-B & DRT3500 SERIES DIRECT-VENT GAS FIREPLACES

KIT CONTENTS

1 ea. Log Set
1 ea. Instruction Sheet

TOOLS/ITEMS NEEDED

1. Flat Blade Screwdriver
2. Protective Equipment including Cut Resistant Gloves and Eye Protection.

Log Sets - Traditional Models *		
Cat. No.	**Model**	**Description**
F2876	CHAROAK35	35” Charred Oak Log Set
F2877	CHAROAK40-45	40” and 45” Charred Oak Log Set
F2878	DFTWOOD35	35” Driftwood Log Set
F2879	DFTWOOD40-45	40” and 45” Driftwood Log Set

Table 1

**** DRT3500 Series fireplaces are approved for use with the Charred Oak Log Sets only.***

GENERAL INFORMATION

This log placement guide has been prepared to present detailed log placement illustrations and provide instruction to assist in the placement of logs at the initial (new appliance) setup and after the annual cleaning and inspection cycles. The information provided here is to be used in conjunction with the Installation and Operation Instructions provided with the appliance.

If you encounter any problems, need clarification of these instructions, or are not qualified to properly install this kit, contact your local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation.


DO NOT attempt to install the logs until the appliance installation has been completed, the gas line connected and tested for leaks, and the initial burner operation has been checked out.

The logs have notches/tabs to assist proper positioning. Upper logs rest on lower logs via notches/tabs. Proper log placement is critical to prevent sooting. Place the logs in the gaps between flame peaks, so they do not impinge the flames. Follow the log placement instructions precisely.

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

SHUT DOWN THE APPLIANCE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

INSTALLATION INSTRUCTIONS - 35/40/45 DRIFTWOOD LOG SET (ScorpioCD-C series and DRC3000-B series only)

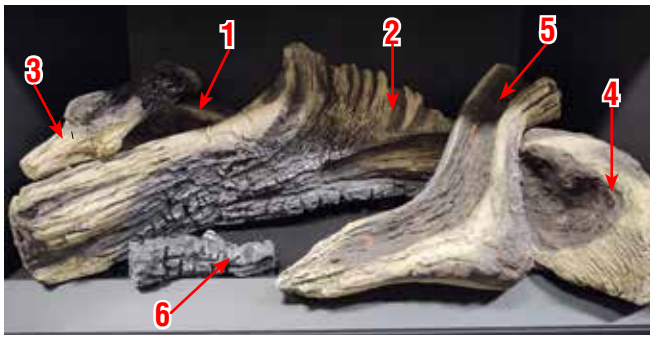

Log Number	Description
1	Left Rear Log
2	Rear Log
3	Left Top Log
4	Right Bottom Log
5	Right Top Log
6	Front Ember Log

Figure 1

1. If necessary, remove the glass door per instructions in the Installation and Operation Manual.
2. If installing accessory porcelain panels in this fireplace, the front ramp ***(Figure 2)*** must be changed out prior to the installation of these logs. Please refer to the Installation and Operating Manual provided with your fireplace.



Figure 2

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

3. Remove the rear contemporary panel by lifting up with a flat blade screwdriver and discard *(**Figure 3**)*.



Figure 3

4. Locate the three mounting tabs and bend up using a flat blade screwdriver *(**Figure 4**)*.



Figure 4

5.Place log #1 on tab #1 **(*Figure 5*)**.



Figure 5

6. Place log #2 using tabs #2 and #3 ***(Figure 6)***.

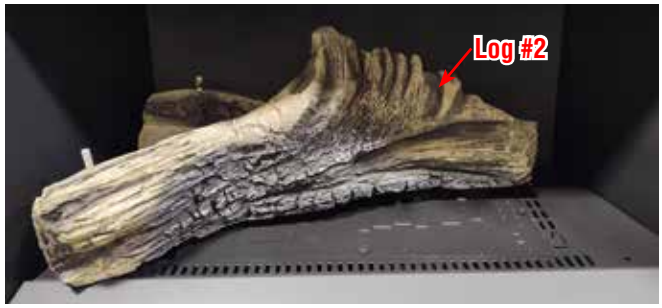


Figure 6

7. Place log #4 as seen below ***(Figure 7)***.



Figure 7

8. Place log #5 using pin in log #4 and resting on the front metal ramp*(**Figure 8**)*.



Figure 8

9. Place log #3 using pins on log #1 and log #2. Place log #6 as shown in *(**Figure 9**)* being sure not to block any burner ports.

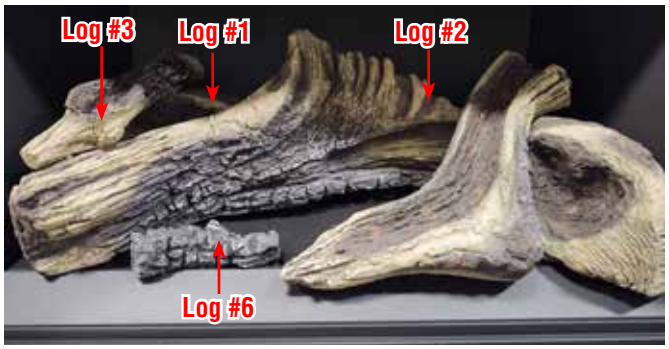


Figure 9


10. Fill in any areas left with crushed glass media. Use only one layer and do not mound any media *(**Figure 10**)*.



Figure 10

INSTALLATION OF LOG SET IS NOW COMPLETE.

INSTALLATION INSTRUCTIONS - 35/40/45 DRIFTWOOD LOG SET (Scorpio & Scorpio-B series only)

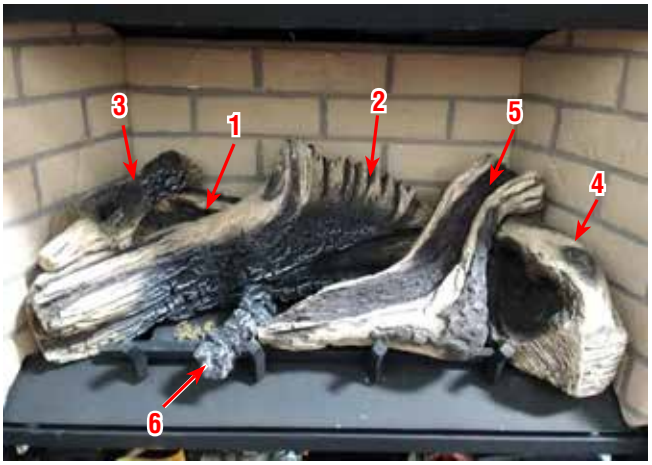

Log Number	Description
1	Left Rear Log
2	Rear Log
3	Left Top Log
4	Right Bottom Log
5	Right Top Log
6	Front Ember Log

Figure 11

1. If necessary, remove the glass door per instructions in the Installation and Operation Manual. Locate the placement tabs *(**Figure 12**)*.
2. Bend up the log placement tabs *(**Figure 12**)*. Place glowing embers and other media *(see **Figure 12**)*.

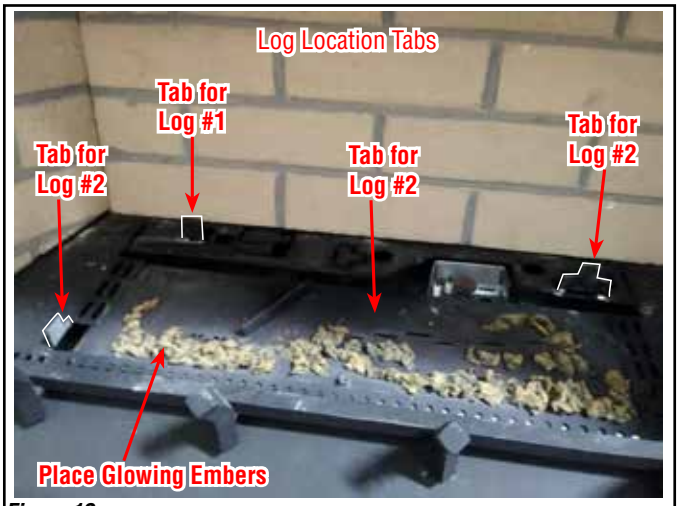


Figure 12

3. Align the notches in the left rear log (1) with the left rear locating tab *(**Figures 12 and 13**)*.
4. Position the Rear Log (2) on the left front and right rear log placement locating tabs *(**Figures 12 and 14**)*.
5. Position the left top log (3), shown in ***Figure 15*** on locating pins outlined in ***Figure 14***.



Figure 13

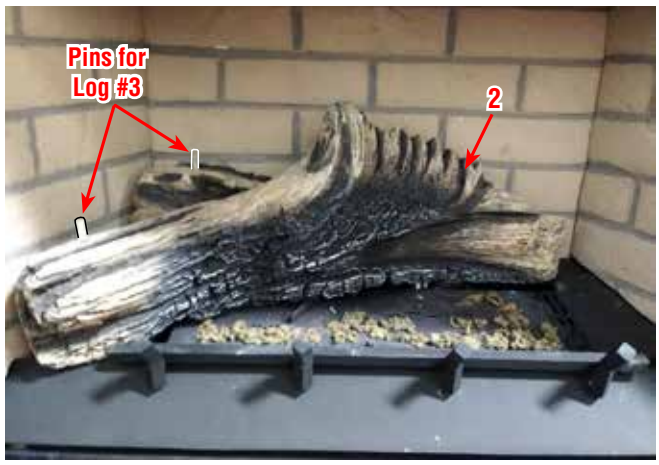


Figure 14

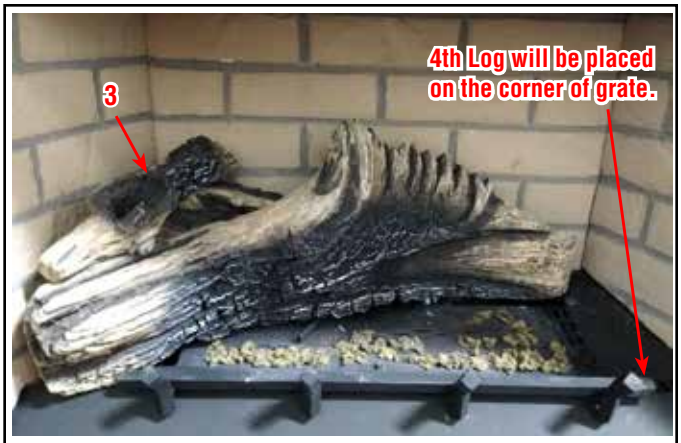


Figure 15

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

6. Position the right bottom log (4) on the corner of the grate *(**Figure 15**)* and as shown in ***Figure 16***.
7. Position the right top log (5) on the pin shown in ***Figure 16*** and as shown in ***Figure 17***.

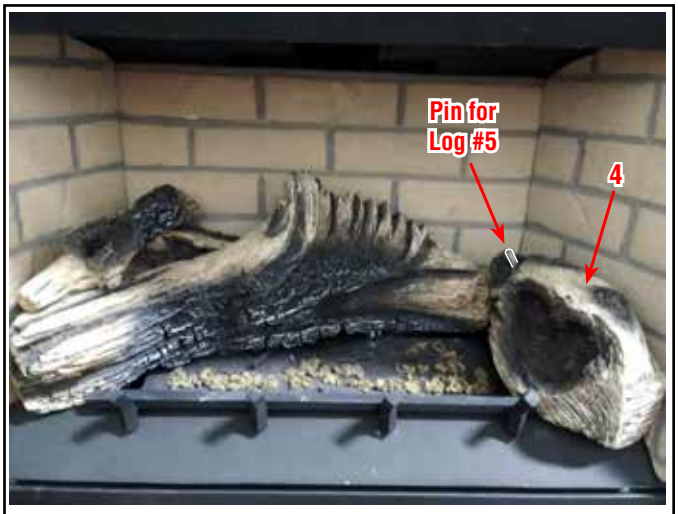


Figure 16




Figure 17

8. Position the front ember log (6) on the grate called out in ***Figure 17*** and as shown in ***Figure 18***.



Figure 18

INSTALLATION INSTRUCTIONS - 35 CHARRED OAK LOG SET

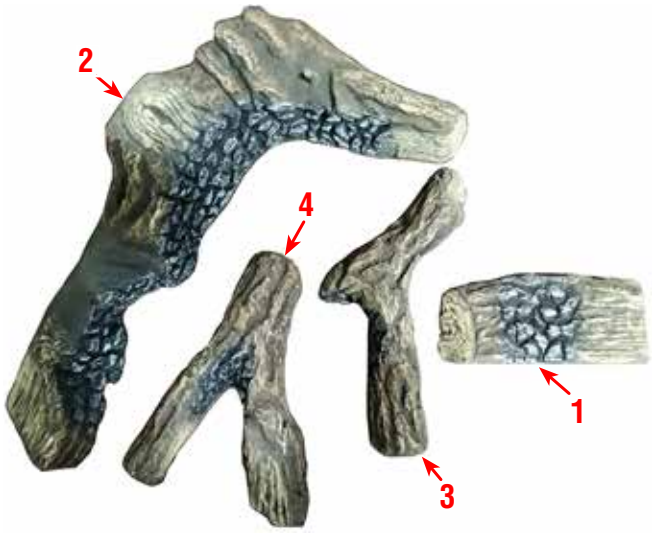

Log Number	Description
1	Left Rear Log
2	Rear Log
3	Top Front Right Log
4	Top Front Left Log

Figure 19

1. If necessary, remove the glass door per instructions in the Installation and Operation Manual. Locate the placement tabs *(**Figure 20**)*.
2. Bend up the log placement tabs *(**Figure 20**)*. Place glowing embers *(see **Figure 20**)*.
3. Align the notches in the left rear log (1) with the left rear locating tab *(**Figures 20 and 21**)*.

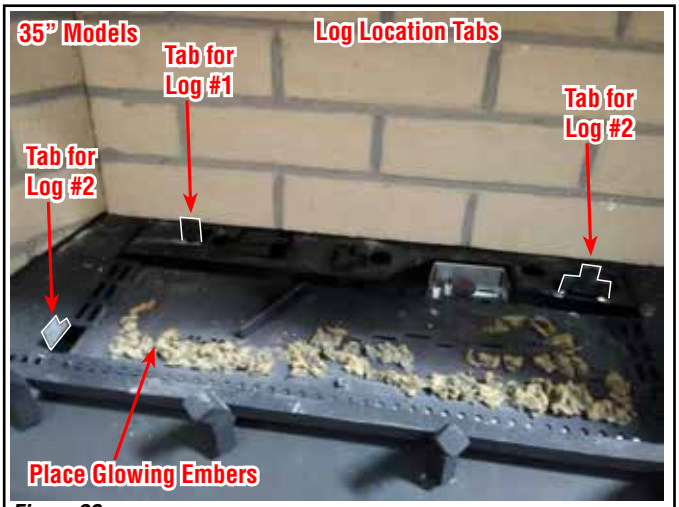


Figure 20

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.



Figure 21

4. Position the Rear Log (2) on the left front and right rear placement locating tabs *(**Figures 20 and 22**)*.
5. Position the top front right log (3), as shown in ***Figure 23*** on the locating pin outlined in ***Figure 22***.

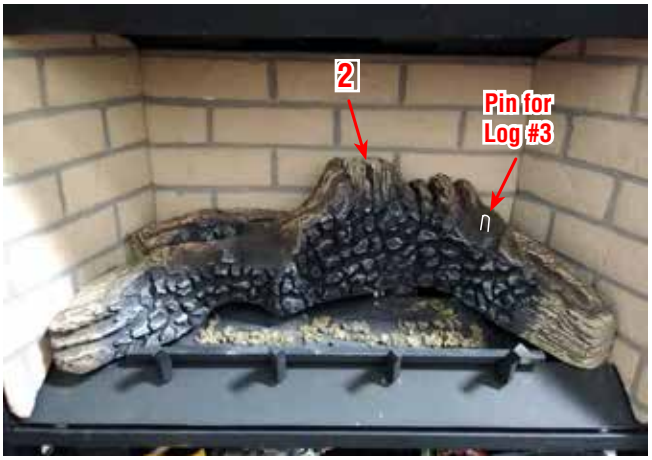


Figure 22




Figure 23

6. Position the Top Front Left Log (4), shown in ***Figure 24*** on the landing area outlined in ***Figure 23***.



Figure 24

INSTALLATION INSTRUCTIONS - 40/45 CHARRED OAK LOG SET

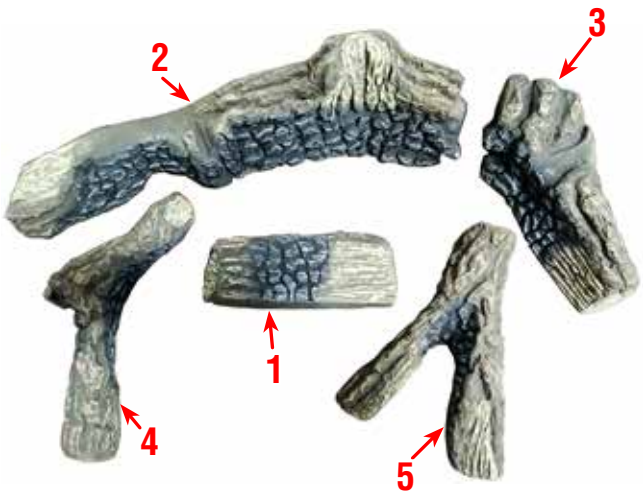

Log Number	Description
1	Left Rear Log
2	Rear Log
3	Front Right Log
4	Top Front Right Log
5	Top Front Left Log

Figure 25

1. If necessary, remove the glass door per instructions in the Installation and Operation manual. Locate the placement tabs *(**Figure 26A or 26B**)*.
2. Bend up the log placement tabs *(**Figure 26A or 26B**)*. Place glowing embers and other media *(**Figure 26A**)*.

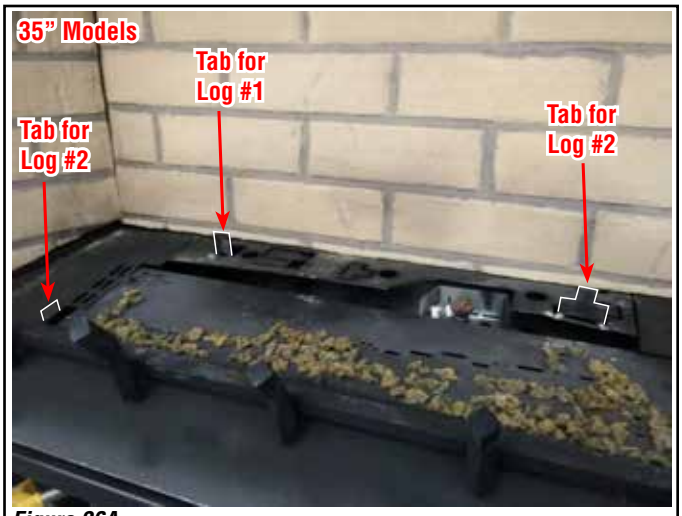


Figure 26A

3. Align the notches in the left rear log (1) with the left rear locating tab *(**Figures 26A and 27**)*.
4. Position the Rear Log (2) on the left front and right rear placement locating tabs *(**Figures 26A and 28**)*.

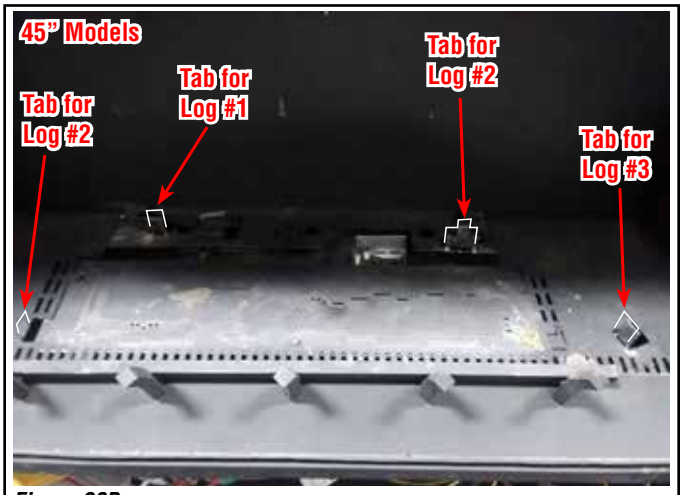


Figure 26B



Figure 27



Figure 28

5. **40" Models** - The front right log (3) butts up against the grate as shown in ***Figure 29.***
   45" Models - Align the notch on the bottom of the front right log (3) over the front right locating tab (***Figures 26B and 29)***.
6. Position the top front right log (4), as shown in ***Figure 30*** on the landing outlined in ***Figure 29***.



Figure 29



Figure 30

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

7. Position the Top Front Left Log (5), shown in ***Figure 31*** on the pin outlined in ***Figure 30***.

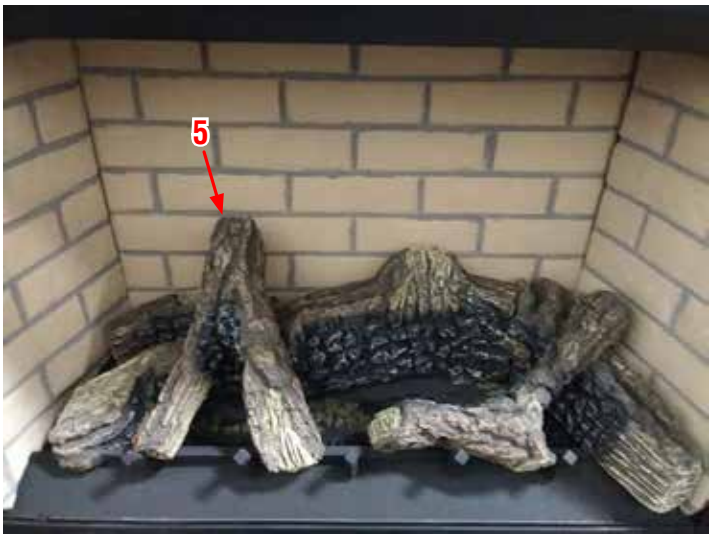


Figure 31

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2022 Innovative Hearth Products

P/N 900796-00 Rev. A 02/2022

INNOVATIVE HEARTH PRODUCTS

1769 East Lawrence Street, Russellville, AL 35654