

## INSTALLATION INSTRUCTIONS FOR REFLECTIVE GLASS LINER KITS

[FOR USE WITH ASTRIA ALLUME & ALLUME DLX SERIES, AND SUPERIOR DRL4000 & DRL6000 SERIES FIREPLACES]

### KIT CONTENTS

- 2 ea. Glass Side
- 3 ea. Glass Rear
- 1 ea. Instruction Sheet

### TOOLS NEEDED (NOT SUPPLIED)

- Electric Drill/Driver Gun (optional)
- Phillips Screwdriver/Phillips Bit
- 5/16 Nut Driver
- 1 pair of gloves
- Glass Cleaning Supplies

REFLECTIVE GLASS LINER KITS, 5 PIECE			
Fireplace	Cat. No.	Model	Description
48"	F4850	CGLK-BLK-LIN48	Reflective Black
60"	F3776	CGLK-BLK-LIN60	Reflective Black
	F3777	CGLK-WHT-LIN60	Reflective Ivory
72"	F4402	CGLK-BLK-LIN72	Reflective Black
	F4403	CGLK-WHT-LIN72	Reflective Ivory
84"	F4404	CGLK-BLK-LIN84	Reflective Black
	F4405	CGLK-WHT-LIN84	Reflective Ivory

### GENERAL INFORMATION

The reflective glass liner kit is intended to be used as a decorative addition to single sided application fireplace models listed on this instruction sheet. Please read this instruction sheet in its entirety before applying this kit to the fireplace.

**NOTE: THIS KIT IS ONLY APPLICABLE TO SINGLE SIDED UNITS.**


**ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.**

Refer to the appliance installation instructions and care and operations manual (iico) for detailed instructions.

**TURN OFF THE FIREPLACE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.**

**TURN OFF GAS AND POWER TO THE APPLIANCE AND USE LOCKOUTS TO PREVENT ACCIDENTAL/UNSAFE OPERATION.**

**PREPARING THE FIREPLACE FOR REFLECTIVE GLASS LINER INSTALLATION**

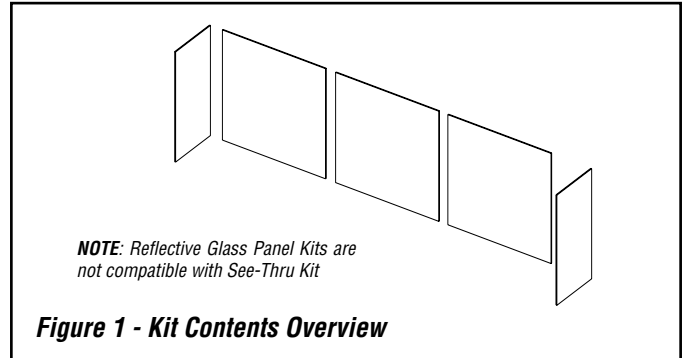

**INSTALLER: Leave this manual with the appliance**  
**CONSUMER: Retain this manual for future reference**

### IMPORTANT NOTICE

**REFLECTIVE GLASS LINER KIT SHOULD BE INSTALLED BEFORE ANY MEDIA IS INSTALLED.**

### WARNING

**Only use materials listed here. Only authorized materials have been tested for use within the fireplace and its environment. Do not attempt to use any different materials in the fireplace. Doing so may be dangerous and will void the warranty and will result in incomplete combustion, sooting, and poor flame quality.**

### Accessing The Fireplace


1. To access the glass door securing latches, first remove trim kit (if installed) and screen barrier from fireplace.
2. Lift the barrier to clear the bottom channel and swing the bottom of the barrier out. Then lower the barrier to clear the top channel.
3. Pull forward and upward on the door latch handles to unlatch the door.
4. Swing the top of the glass door away from the fireplace at about 15° angle.
5. Carefully grip the door at the top and bottom, and remove it from the fireplace. Place the door in a safe location for later re installation.

## INSTALLATION

**NOTE:** The use of gloves is recommended while handling the glass to avoid injury as well to avoid finger prints.

With the fireplace in place and the accessories removed, follow these steps to install the reflective glass liner panels.

1. Open the glass liner kit, identify the glass liner panels; 3 of the same size are for the rear and 2 of the same size are for the left/right sides.

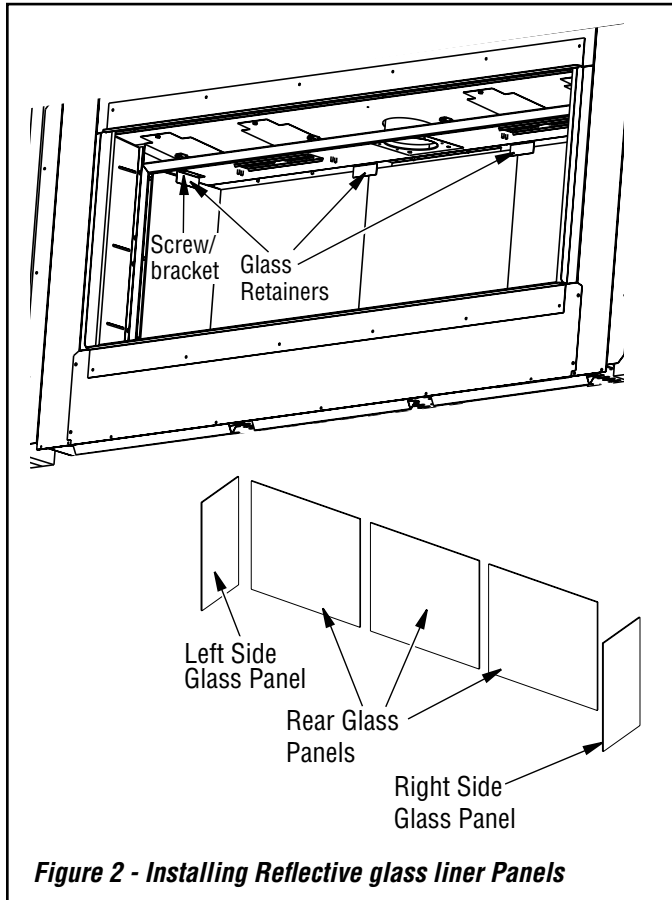

**Figure 2 - Installing Reflective glass liner Panels**

2. Loosen screws (do not remove) holding four (4) retaining brackets underneath firebox top. Slide retaining brackets off screws and retain for re-installation (**Figure 2**).
3. Install left and right side glass liner panels against sides of firebox and securing with retaining brackets.
4. Starting from one side, install three (3) rear glass liner panels by inserting into the firebox bottom channel and securing with retaining brackets (**Figure 2**).
5. Clean the glass liner panels with appropriate glass cleaner to remove finger print marks.
6. After the installation of reflective glass liner panels, proceed with reinstalling the media kits if removed (glass media, logs, river rocks).
7. Retrieve the glass door. Visually inspect the gasket on the backside of the frame. Gasket surface must be clean, free of irregularities and seated firmly.
8. Re-install glass door by placing the bottom edge of the door assembly into the door channel on the firebox. The tabs on the bottom of the door on each side will fall into corresponding slots on the door channel of the firebox.
9. Re-install the barrier by sliding it upward into the top barrier channel, then push back slightly on the bottom, and lower it into the lower barrier channel.
10. Re-install trim assembly - if applicable.

Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

