



INSTALLATION INSTRUCTIONS FOR PLACEMENT OF OAKMERESPLIT18, OAKMERESPLIT24, OAKMERESPLIT30, LNF18ES, LNF24ES, AND LNF30ES LOG SETS.

THESE LOG PLACEMENT INSTRUCTIONS ARE A SUPPLEMENT TO THE LOG BURNER INSTRUCTIONS. LOG BURNER INSTRUCTIONS MUST BE READ AND FOLLOWED TO THEIR ENTIRETY TO ASSURE SAFE AND PROPER INSTALLATION AND OPERATION. THE LOG BURNER INSTRUCTIONS ARE INCLUDED SEPARATELY INSIDE THE CARTONED LOG BURNER ASSEMBLY. ADDITIONAL COPIES OF BOTH THESE INSTRUCTIONS AND THE LOG BURNER INSTRUCTIONS ARE AVAILABLE AT www.ihp.us.com.

GENERAL INFORMATION

THE FIREPLACE MUST BE OFF AND COLD BEFORE BEGINNING.

READ ALL OF THE STEPS BEFORE STARTING THE INSTALLATION.

PACKAGING LIST

- 1 ea. Complete Log Set
- 1 ea. Installation Instructions

TOOLS/SUPPLIES NEEDED

- Safety Glasses
- Protective Work Gloves
- Heat Resistant Gloves

Installation and service must be performed by a qualified installer, service agency or the gas supplier. Any safety screen, guard, or barrier removed for servicing an appliance must be replaced prior to operating the heater. The fireplace screen or guard designed for this unvented appliance must be installed prior to operation.

IMPORTANT: Read the owner's manual carefully and completely before trying to assemble, operate or service this fireplace. Improper use of this fireplace can cause serious injury or death from burns, fire, explosion, electrical shock and carbon monoxide poisoning.

INSTALLER:

Leave instructions with the appliance.

CONSUMER:

Retain instructions for future reference.

This is a complete Log Set and shall not be used otherwise. This log set shall not be used for replacement of single logs.

It is very important to install these logs exactly as instructed. DO NOT MODIFY LOGS.

Log Sets OAKMERESPLIT18 and LNF18ES shall only be used with burners listed below:

NATUREFLAME18MN	NATUREFLAME18MP
NATUREFLAME18EN	NATUREFLAME18EP
NF18MN	NF18MP
NF18EN	NF18EP

Log Sets OAKMERESPLIT24, OAKMERESPLIT30, LNF24ES and LNF30ES shall only be used with burners listed below:

NATUREFLAME24MN	NATUREFLAME24MP
NATUREFLAME24EN	NATUREFLAME24EP
NF24MN	NF24MP
NF24EN	NF24EP

INSTALLATION OF LOGS ON ANY OTHER BURNER IS STRICTLY PROHIBITED.

If your gas log burner is not listed above, please refer to your owners manual or contact IHP Tech Support/Customer Service for further assistance.

Failure to position the parts in accordance with these instructions or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.


CAUTION: Burn hazard! Logs will remain hot after use. If you need to reposition any log to maintain the proper layout, use heat resistant gloves or allow logs adequate time to cool before handling.

**OAKMERESPLIT18, OAKMERESPLIT24,
OAKMERESPLIT30, LNF18ES, LNF24ES, AND LNF30ES
LOG PLACEMENT**


It is very important to install the logs exactly as instructed. Do not modify logs. Only use logs supplied with appliance or as identified for use with the appliance as shown.

1. Remove the entire Log Set provided and check for damage. If damaged, STOP!!! Contact dealer or IHP.
2. If you currently have a log set installed: Remove the entire Log Set that is currently installed on your Gas Log Burner and discard entire set.
3. Follow the steps found beginning on this page for installation of your new complete Log Set.

1. Place the Left Front Log on the front left burner pins using the holes provided in the bottom of the log.

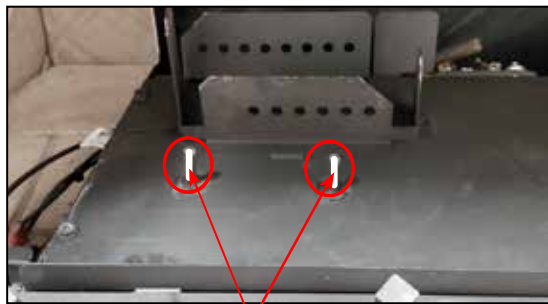

FRONT LEFT BURNER PINS

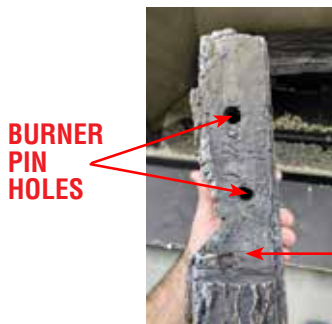

**BURNER
PIN
HOLES**

**LEFT
FRONT
LOG**



LEFT FRONT LOG

2. Place the Right Front Log on the front right burner pins using the holes provided in the bottom of the log.



FRONT RIGHT BURNER PINS



**BURNER
PIN
HOLES**

**RIGHT
FRONT
LOG**



LEFT FRONT LOG

RIGHT FRONT LOG

3. Place the Small Right Log in between the right rear bracket and the right leg flange using the slot on the back of the log. Insert the small log onto the flange at a 45 degree angle and slightly rotate counterclockwise until the charred side of the log is facing to the inside.

RIGHT LEG FLANGE




RIGHT REAR BRACKET




SLOT


**SMALL
RIGHT
LOG**

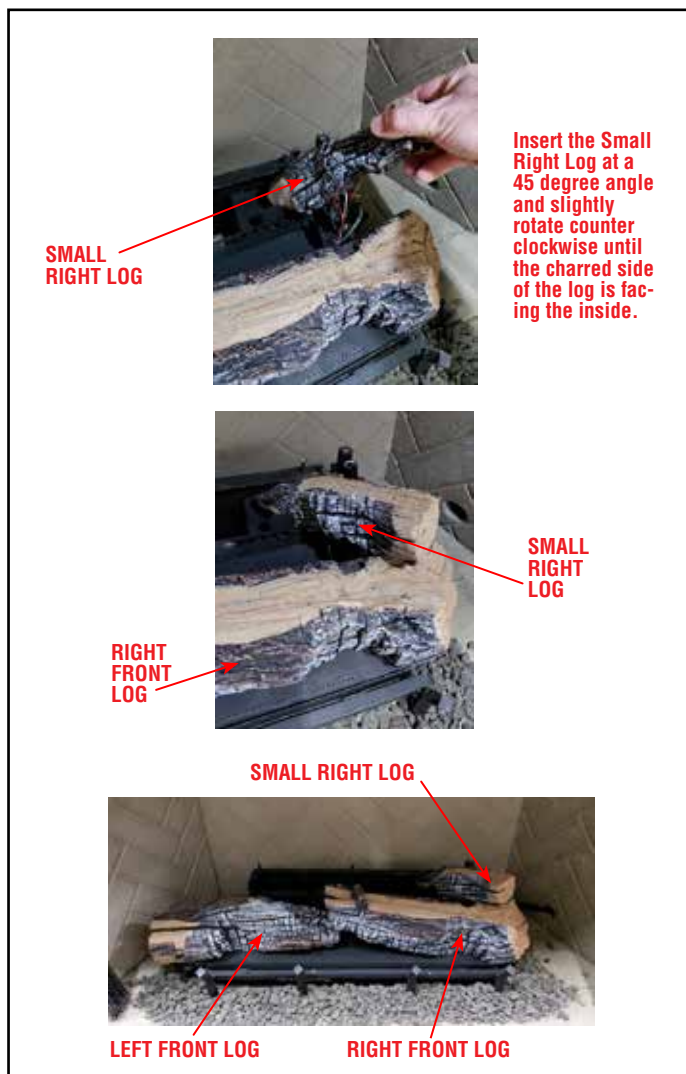


4. Place the Rear Log on the three (3) rear pins as shown using the holes provided in the bottom of the log.

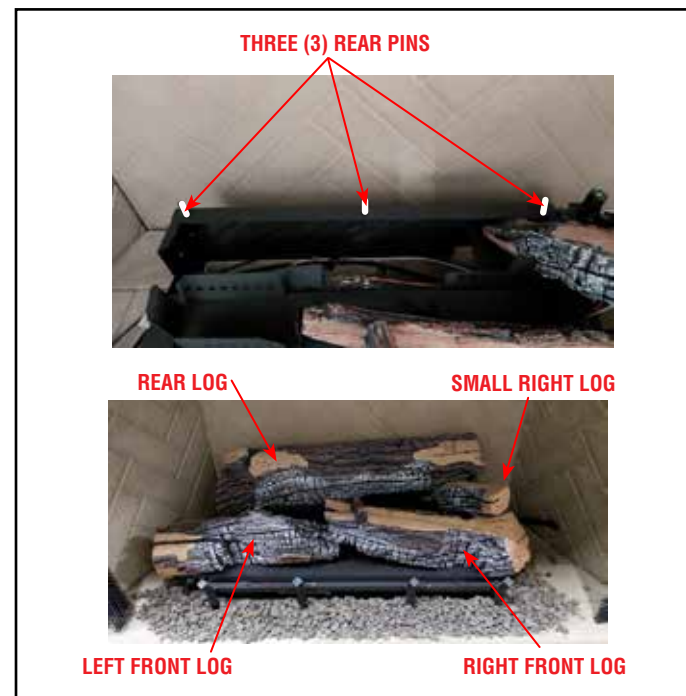

5. Place the Top Center Log using the slot and placing it over the Right Front Log and the Rear Log as shown.

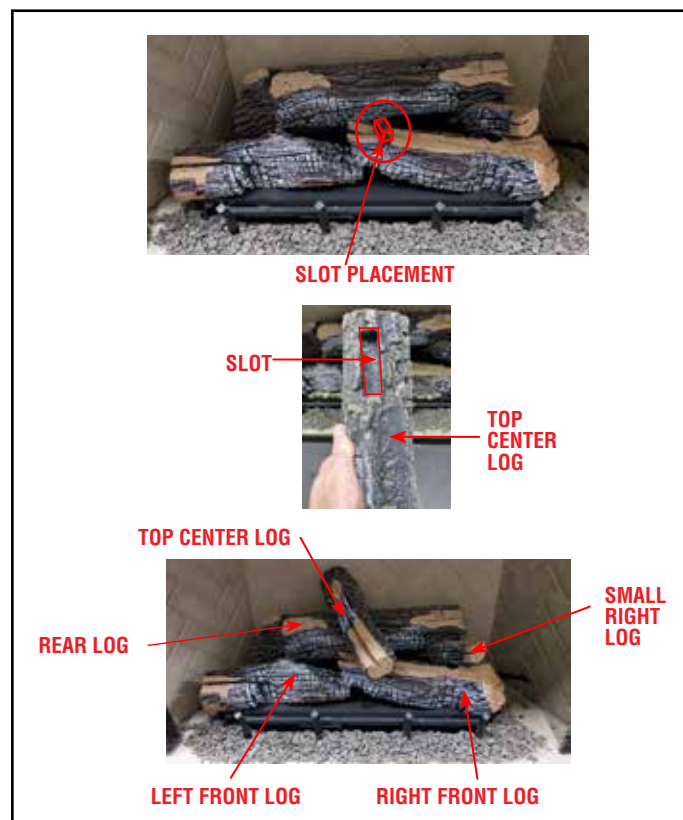


6. Place the Top Rear Log into the slot on the Rear Log and cross over the Top Center Log.

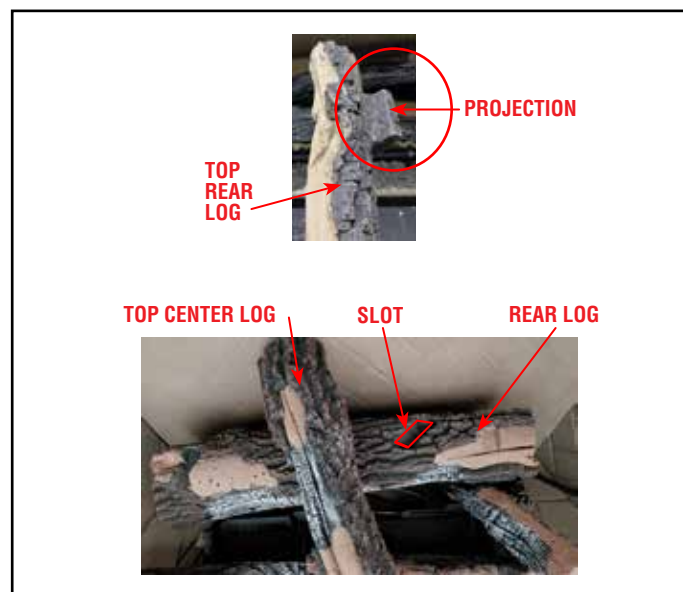





7. Place the Top Left Log onto the Rear and Left Front Logs as shown. Notice the shape on the back of the log. It will match the slot on the Rear Log.

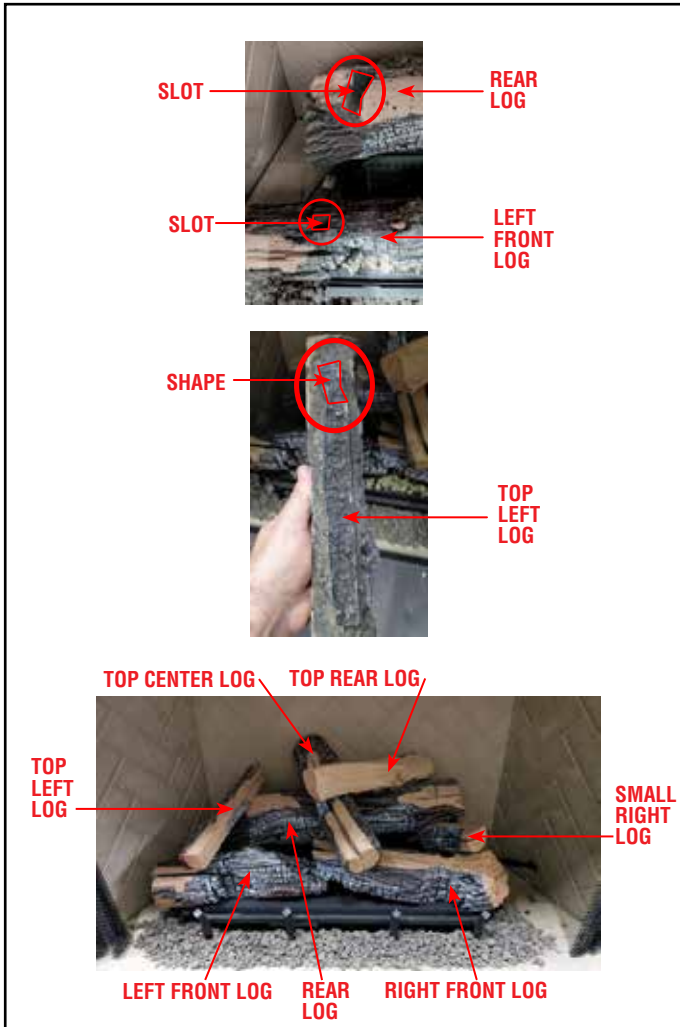


8. Place the Top Right Log using the slots on the Rear and Right Front Logs making sure the charred side is facing the inside.

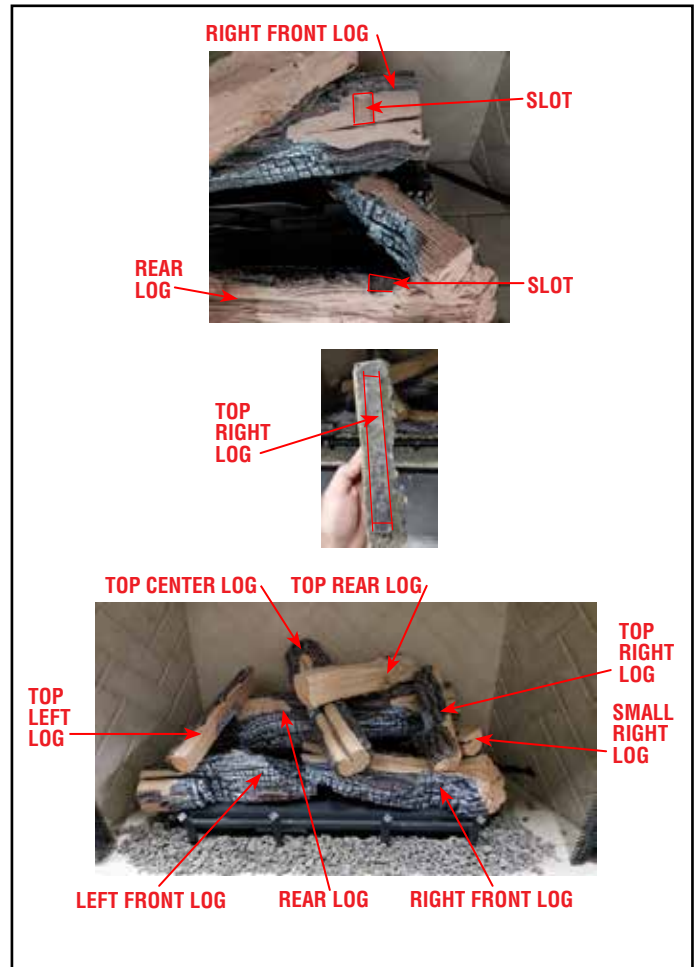

9. Place Glowing Embers behind the front burner ports as shown. **DO NOT PLACE EMBERS OVER THE BURNER PORTS!**

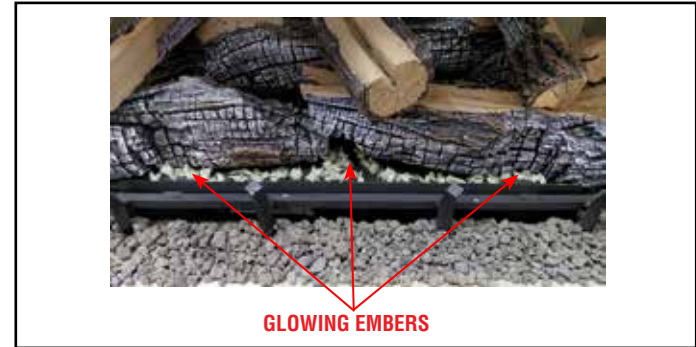

10. Place the Platinum Embers on top of the Glowing Embers as shown.

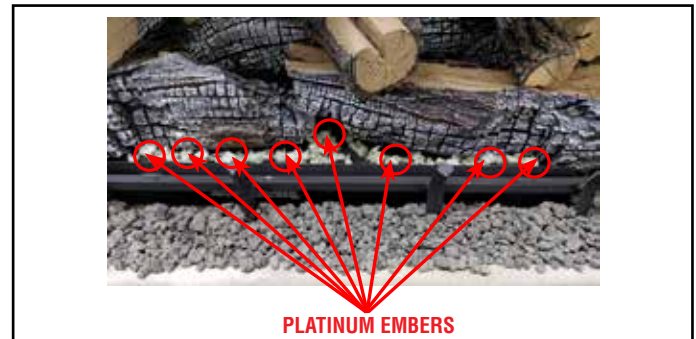

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, and prices, and also to discontinue colors, styles, and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2026 Innovative Heath Products
P/N 901555-00 Rev. NC 08/2026

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE

